




# 3 Zone Remote Control Instructions



- Button 1 – Zone On/Off
- Button 2 – Auto Rotate Zones
- Button 3 – Flash Controller
- Button 4 - Off

## Examples of Operation

- a) Press button 1 once – Zone 1 on
- b) Press button 1 again – Zone 2 on
- c) Press button 1 again – Zone 3 on
- d) Press button 1 again – Zones 1&2 on
- e) Press button 1 again – Zones 2&3 on
- f) Press button 1 again – Zones 1&3 on
- g) Press button 1 again – Zones 1&2&3 on

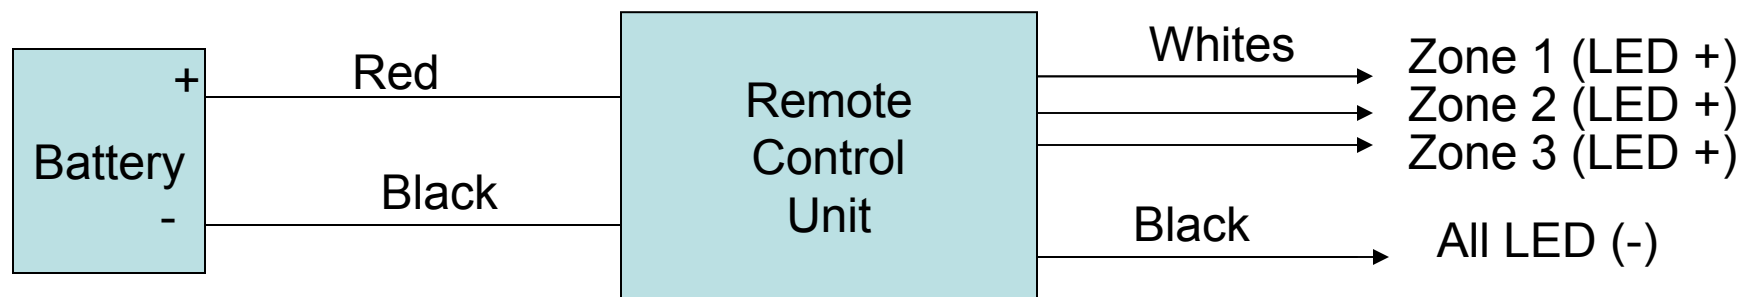

Custom Dynamics  
1800-382-1388

[www.customdynamics.com](http://www.customdynamics.com)

Zone 1 White is directly under Red Wire  
Zone 2 White is middle white  
Zone 3 White is last white wire