



Custom Dynamics® LED Passing Lamps Installation Instructions

We thank you for purchasing the Custom Dynamics® LED Passing Lamps. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: CD-45-B, CD-45-C

Package Contents:

- 4.5" LED Passing Lamps (2)
- Instructions

Fits: 2005-2021 Harley-Davidson® models equipped with OE 4.5" passing lamps. DOES NOT FIT 2018-2021 Softails.

2004 & Earlier Harley-Davidson® Models require adapter CDTB-PLA (sold separately).



ATTENTION

Please read all Information below before Installation


Important: Units must be properly aimed such that the beam pattern cut off line complies with applicable regulations. It is recommended a professional service provider or qualified dealer perform the necessary adjustments for proper aiming.

Warning: To prevent possible electrical shock, disconnect the negative Battery terminal before installing this product.

Note: 2004 and earlier HD models will require adapter part number: CDTB-PLA to make power connections plug and play. Adapter sold separately.

Installation

1. Disconnect the vehicle battery negative [-] terminal.
 2. Review detailed service manual for instructions on replacing factory passing lamp bulbs.
 3. Remove the factory passing lamps from vehicle.
 4. Connect the passing lamps to the existing factory Connectors. See diagram for wire color assignment.
- Note:** 2004 and earlier models require adapter CDTB-PLA for plug and play capability. Adapter sold separately.
5. Re-assemble passing lamp per the instructions in detailed factory service manual. Make sure no wires or any components of the harness or adapter can be crushed or pinched during installation.
 6. Connect the vehicle battery negative [-] terminal.
 7. Turn ignition power on to test both lamps for proper function. Aim or adjust if needed.

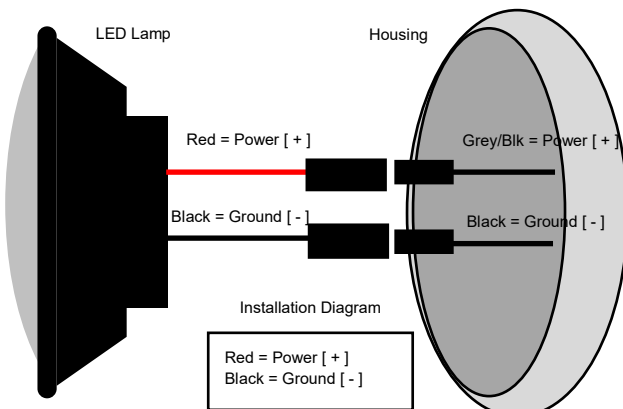

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST