


Note: Never Exceed a 3 Amp Fuse Using a Fuse Higher than 3 Amp Will Void Remote Warranty. Any Alteration to Remote will Void Remote Warranty

For Color Instructions:
Go to: www.customdynamics.com/instructions.html

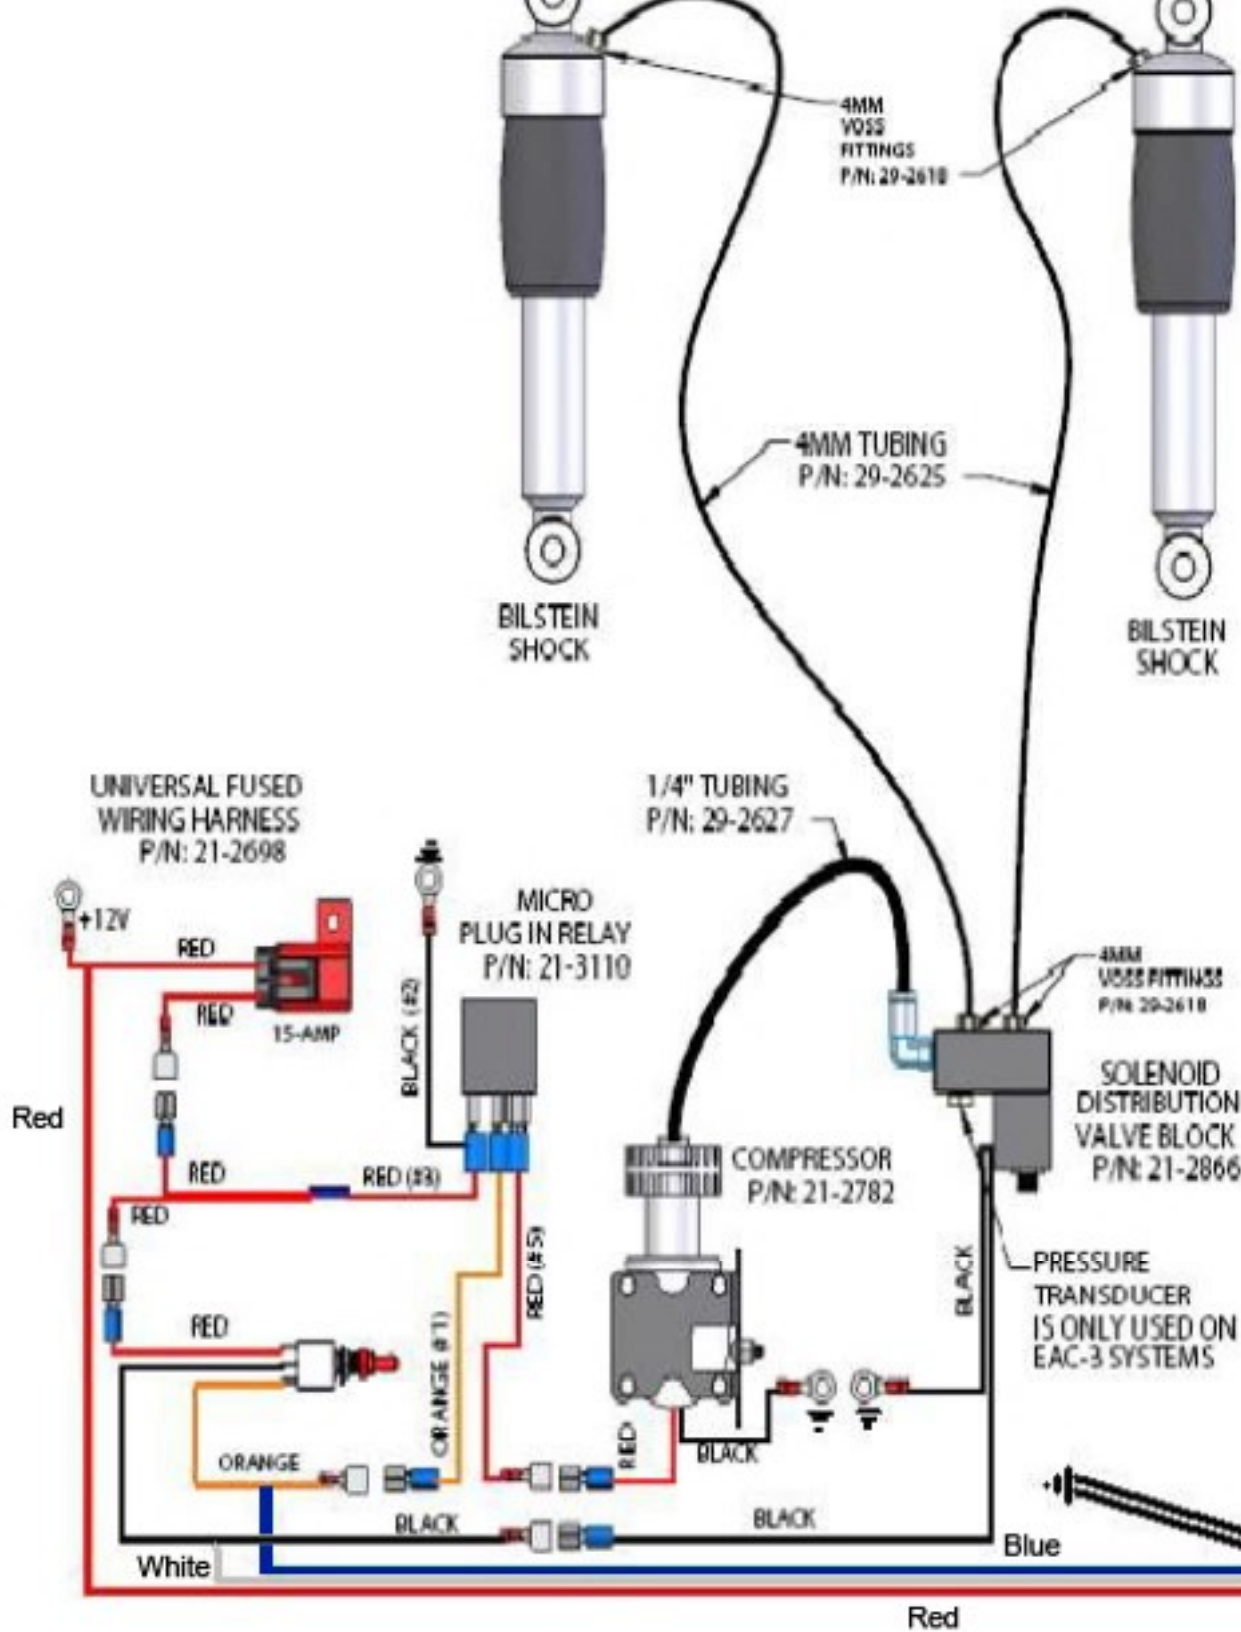

Black wires: from remote go to a good ground.

Blue wire: from remote gets attached to the orange wire of the Arnott system

Red wire: from remote gets attached to the positive of the Arnott system.

Gray wire in diagram is a White wire on the remote and gets attached to the Black wire of the Arnott system (NOT GROUND WIRE) the lowering wire of the Solenoid Valve.

Blue wire: is Antenna DO NOT ATTACH TO ANYTHING.

Blue

Street Magic