

Street Magic M109 Flasher Relay Installation Instructions

- 1) Remove seat and the left and right side panels under the seat as per manufactures guidelines. (see Fig 1)
- 2) Locate the stock Flasher realy and harness on the left side of the bike and remove it from the bracket on the bike. (see Fig 2)
- 3) For easier access, move flasher relay to the right side of the bike.
- 4) Locate the BROWN and LIGHT BLUE wire in the harness. They are in-line with the ORANGE wire. (see Fig 3)
- 5) Cafefully cut the BROWN and LIGHT BLUE wires close to the plug as possible without damaging any of the other wires in the harness(see Fig 4).
- 6) Strip back a section of both the BROWN and LIGHT BLUE wires and connect the Flasher Relay to these wires using the supplied Posi Locks. Connect LIGHT BLUE in the HARNESS to the BLUE on the Flasher Relay and the BROWN in the harness to the RED in the Flasher Relay. (see Fig 5) If you have questions on how to use Posi-Tap connectors Please see: www.posi-lock.com
- 7) Test operation of the flasher unit.
- 8) Re-install the Flasher Relay on the stock tab. Ziptie the new flasher relay to one of the existing harness's . (Fig 6)
- 9) Put side panels and seat back on and enjoy!!!



Figure 1



Figure 2

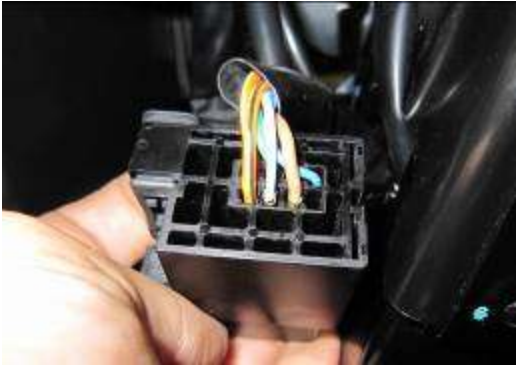


Figure 3



Figure 4



Figure 5



Figure 6