

Stratoliner Installation Instructions

Stratoliner rear turn signal lens



Take a razor knife around the edge
inbetween the lens and the reflector



Then use a heat gun around the edge
use a small screw driver to pry apart


This is what it will look like before
installing the LED cluster



GEN180 Cluster



The cluster used in the following pictures
does not have a base.
Clusters sold will, unless specified

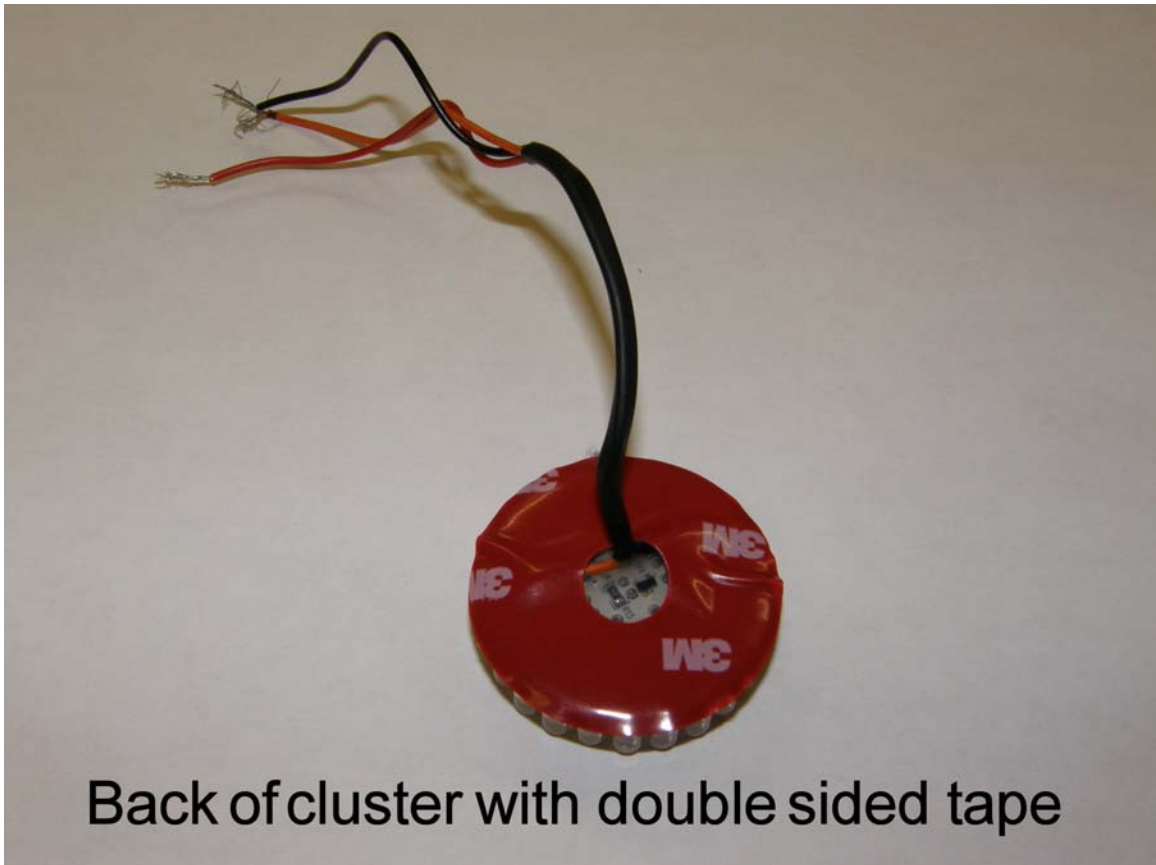

Back of cluster with double sided tape



Cluster mounted in reflector

Put Amazing Goop
around this edge
then place the lens
back on



After drying for 24 hrs
you're ready to reinstall and go
riding



Any questions call Custom Dynamics and ask for
Technical support 1-800-382-1388