



## Street Magic Genesis II Integrated LED Tail Light Installation Instructions

1. Remove stock taillight by unscrewing 2 Philips Head Screws, save screws for use in new LED taillight.
2. Unplug Amp taillight connector at taillight housing base on fender of bike as shown below.

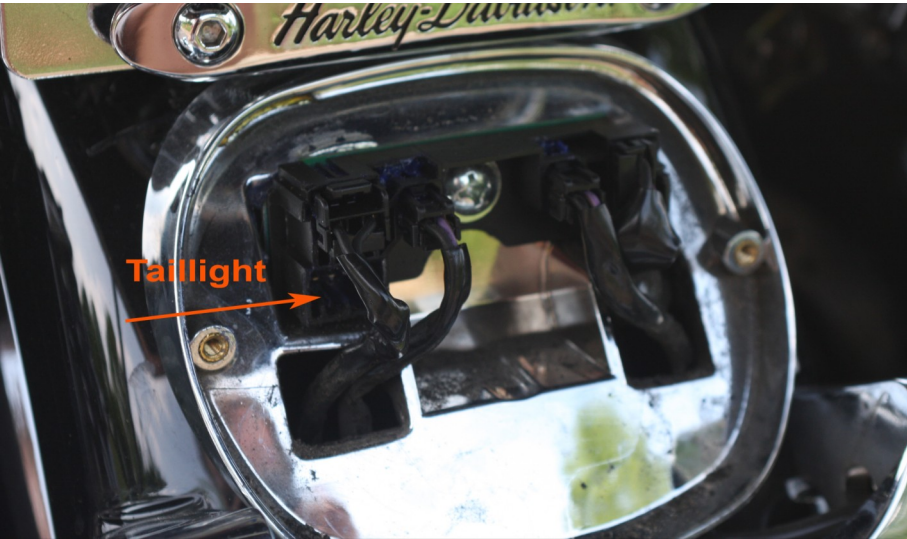


3. Be sure taillight base is clean and free of debris. Gasket will need to make a clean contact with base.
4. Plug Amp connector from new LED taillight into OEM connector. Be sure connector snaps into place.
5. Locate left and right 2 pin turn signal connectors, press down on release as shown and unplug connectors.

6. Plug turn signal connectors from new taillight into OEM connectors, brown into right and purple into left. See picture below.

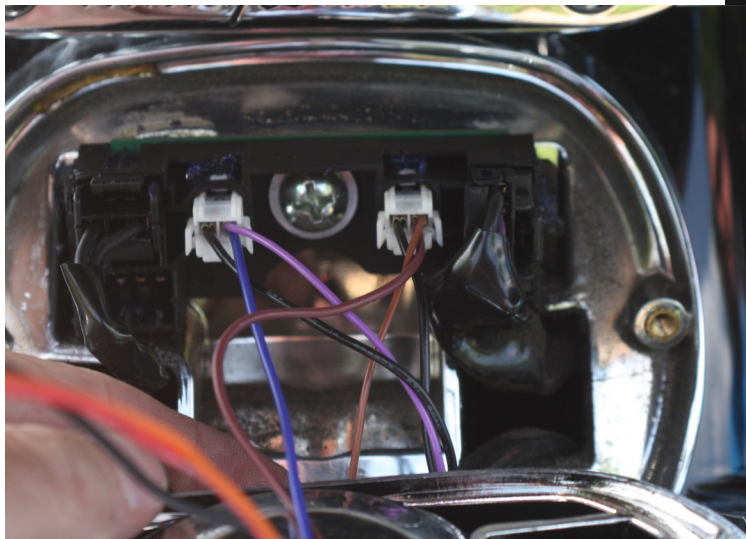

7. If Stock turn signals are being used, plug stock turn signals connectors into tail-light pass through connectors as shown.

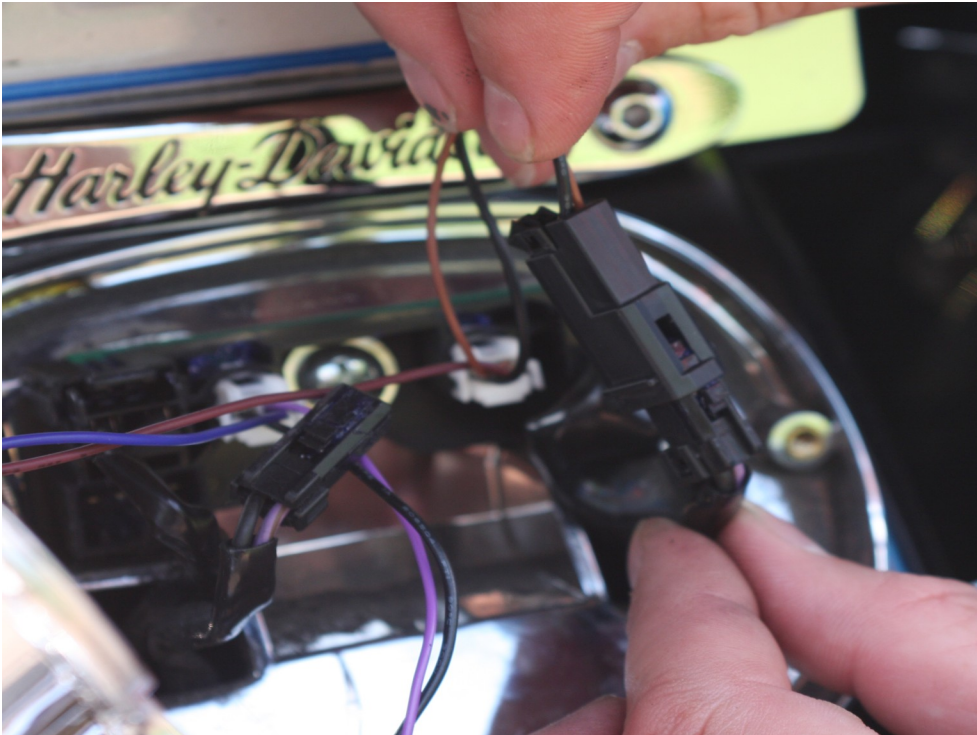

8. Tuck connectors into space in center of base as shown.
9. Place LED taillight into housing base, Insert right philips head screw and tighten 1 turn, insert left philips head screw and tighten 1 turn.
10. Fully tighten right screw and left screw..
11. Check operation of LED taillight in running ,brake and turn signal modes.

**This product is not yet Dot Approved, for off road or show use only.**

**Disclaimer: Custom Dynamics LLC assumes no liability of any kind as a result of conversions or additions to your vehicle**