

Magic Brake Strobe™ Tour Pak

1. **Removing lining from Tour Pak**
2. **Locate connector in front left corner and unplug**
3. **Plug in Street Magic Brake Strobe**
4. **Select Desired Pattern with Power Off**
5. **Re-install Tour Pak Lining**
6. **Check operation before riding**
7. **To change Mode, turn bike off and change dial to desired pattern.**

Pattern 0: Four Flashes then Solid (Incandescent or LED)

Pattern 1: Four Flashes, Solid for 3 Seconds, Repeat (Incandescent or LED)

Pattern 2: Seven Flashes then Solid (Incandescent or LED)

Pattern 3: Seven Flashes, Solid for 3 Seconds, Repeat (Incandescent or LED)

Pattern 4: Quad Strobe then Solid for 1 Second then Quad Strobe (LED Only)


Pattern 5: Quad Strobe, Solid for 1 Second, then Quad Strobe, Solid for 3 Seconds, Repeat (LED Only)

Pattern 6: Blaster X Pattern for 3 seconds, then Solid (LED Only)

Pattern 7: Constant Blaster X Pattern (LED Only)

Pattern 8: Constant Fast Strobe 5 Seconds, then Solid (LED Only)

Pattern 9: Constant Fast Strobe Pattern (LED Only)

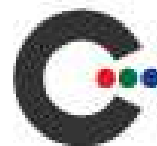

CUSTOMLED