


Street Magic® Genesis™ Series Spyder RT HMT Installation Guide

Included:

- **3M Promoter Pak**
- **3 Posi Locks**
- **Wire Guide Tool**
- **HMT Unit & Harness**

- 1) Remove outer trunk cover by unscrewing the 6 Torx screws on inside of trunk lid. (see Pic. #1)
- 2) Drill 3/16 hole in outer cover in lower right corner of the indent area of cover for wires to pass through. Note location of wire exiting from HMT unit to make sure your hole is in the proper location. (see Pic. #2)
- 3) Wipe area where HMT will sit in trunk lid with enclosed 3M promoter pad. (see Pic. #3)
- 4) Remove backing from 3M tape on HMT unit, pass wire from unit through hole drilled in step 2 and firmly press HMT unit into place in outer trunk cover. (see Pic. #4)
- 5) Pass wire from HMT unit through opening in right side trunk hinge. Then re-install outer cover back onto trunk lid with the 6 Torx screws removed in step 1. (see Pic. #5)
- 6) Remove upper fender trim panel from RT. Panel is held in place by 8 Torx screws located in areas marked with a silver dot in photos. (see Pics. #6, 7, & 8)
- 7) With this panel removed locate the 5 pin tail light connector on right side of RT and unplug it being careful to keep track of both ends. (see Pic. #9)
- 8) Plug HMT harness from kit in between these connectors as shown, keeping long lead from this harness free. (see Pic. #10)
- 9) Using wire guide tool from kit, insert tool in between outer trunk side trim panel and into opening for right side hinge. (see Pic. #11)
- 10) Insert wire from HMT unit in hole in wire tool and pull wire tool back towards outside panel so wire is now between outer panel and inner hinge opening. (see Pic. 12)
- 11) Just above right side tail light, locate hole where wires and antenna cable pass upward towards trunk. Insert wire tool in this opening pushing upward until tool is visible between outer panel and trunk hinge (see Pic. #13 & 14)
- 12) Insert wire from HMT unit into wire tool and pull wire back down until it emerges from opening above right side tail light. (see pic. #15)
- 13) Using supplied Posi- Lock connectors from kit, connect wires from HMT unit to harness coming from tail light. There are 3 wires coming from the harness; an orange, a red and a black. Hook the red wire from HMT to the orange wire from harness if you want the HMT as a running light Or hook red wire from HMT to red wire from harness if you want HMT to function as a brake light. Hook black wire from HMT to black wire from harness. (see Pic. #16) **If you are using the Brake Light Dual Converter Unit, please connect as follows:**

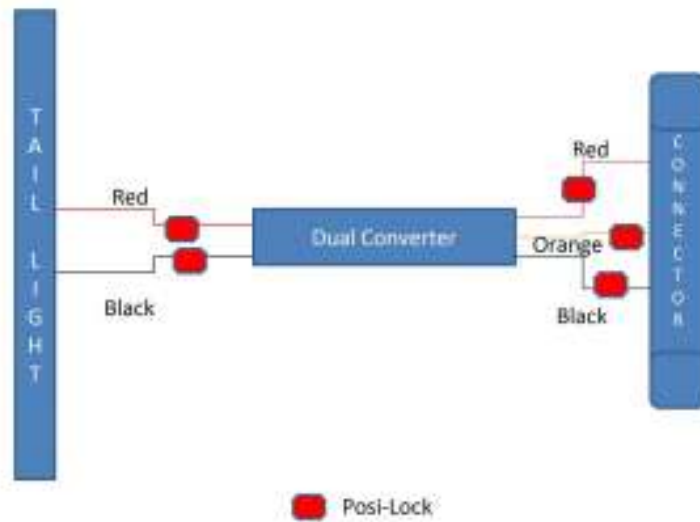

If you have any questions on how to use the Posi-Lock connectors, please see [www. posi-lock.com](http://www.posi-lock.com)

14) Test operation of HMT unit, and reinstall body panel removed in step 6.



Pic #1



Pic #2



Pic #3



Pic #4



Pic #5



Pic #6



Pic #7



Pic #8



Pic #9



Pic #10



Pic #11



Pic #12



Pic #13



Pic #14



Pic #15



Pic #16

For Color Installation Instructions: <http://www.customdynamics.com/instructions.html>