



CHASING LED TIMING COVER 1302

FITS: ALL '84-'99 EVO BIG TWINS, ALL '99-UP TWIN CAMS AND '86-UP XL

PART#	INCLUDED
1303	1 Chasing LED Point Cover Assembly
	1 Finned Cone
	1 Hardware Kit including;
	1 Mounting Plate for Twin Cam
	1 Mounting Plate for XL and Evo Big Twins
	1 Spacer Ring
	5 8-32 x 3/8 Flat Socket Cap Screw (FSCS)
	1 10-24 Hex Nut
	2 #10 SAE flat washers
	1 Dielectric Grease Pack
	1 Alcohol Pad
	4 4" Nylon cable Ties
	1 "Y" Adapter
	1 Scotch Lock, male
	1 T-Tap Scotch Lock, female
1 Controller Switch	
1 Installation Instructions	

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, Torx drivers, wire stripper/crimper, combination wrenches or socket set and ratchet.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

-cont.-



CUSTOMER SERVICE 877.370.3604 (toll free)

INSTALLATION QUESTIONS techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today--select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the fasteners which secure the timing cover, the fasteners and cover will no longer be used.

NOTE: The flat plate with five holes is for twin cam motors. The beveled plate and the spacer ring are for Evo and XL motors. (See [PIC. 1](#))

STEP 3 Install the appropriate plate, using the 8-32 x 3/8 FSCS screws from the hardware kit (five if mounting on a Twin Cam and two if mounting on an XL or Evo) shown in [PIC. 2](#).

STEP 4 Place the LED cover over the stud on the mounting plate; be sure to route the wires away from the exhaust, engine or any moving parts.

NOTE: When installing on Evo or XL motors, place the spacer ring against the mounting plate so that it is behind the cover, making sure that the timing cover wiring is placed in the "notch" of the spacer ring.

STEP 5 Secure the cover using the 10-24 Hex Nut and #10 flat washer, shown in [PIC. 3](#).

STEP 6 Install the finned cone, tightening until it clicks several times.

WIRING

STEP 1 Remove the seat and the side panel (on touring models).

STEP 2 Determine a location on your bike to mount the control switch. This location needs to be close enough to the chasing LED cover so that the wiring harness from the cover will reach the wiring harness from the switch; and the power wires will reach the battery terminals.

STEP 3 The black wire from the switch is a ground wire and needs to be secured to the negative terminal on the battery.

STEP 4 The red wire from the switch (with in-line fuse) is a power wire and needs to be secured to the positive terminal on the battery.

STEP 5 Locate the ignition harness (carbureted), or the electronic fuel injection harness which is most commonly located under the seat or under the side cover on the right hand side of the motorcycle. See [PIC. 4](#) and [PIC. 5](#).





STEP 6 Carefully expose the wires located inside the harness cover.

STEP 7 Locate the front (blue with orange trace) or rear (yellow with blue trace) coil wire inside the harness.

NOTE: Refer to an H-D electrical diagnostic manual to verify the correct wire colors for your motorcycle.

-cont.-

Kuryakyn®

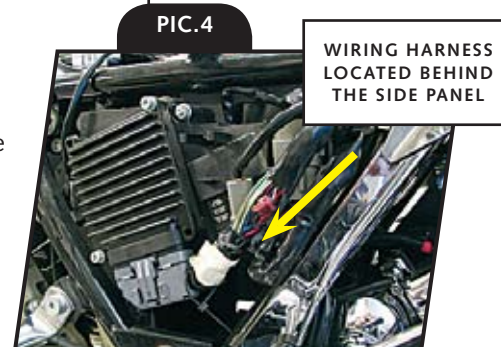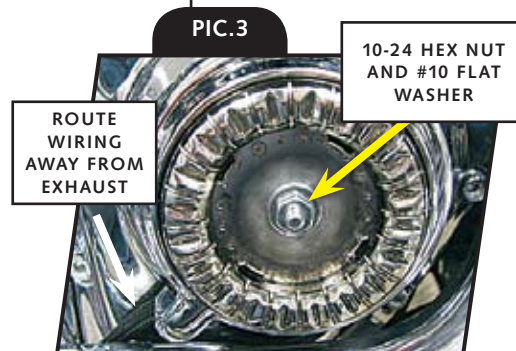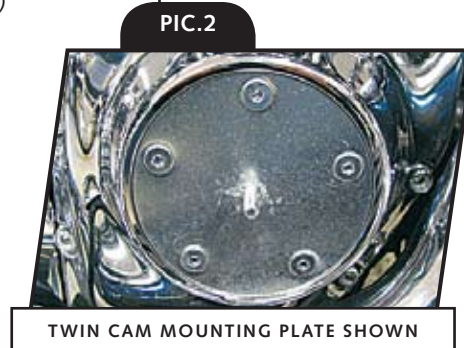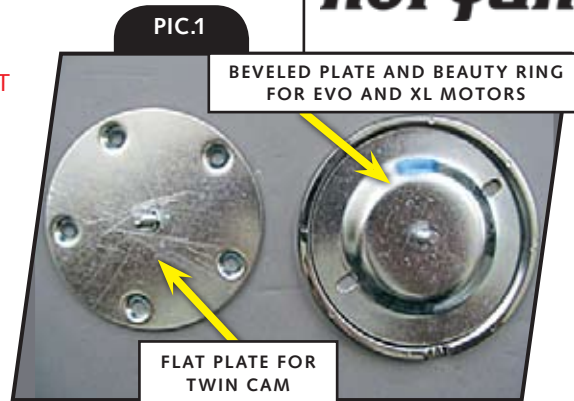

PAGE
2

STEP 8 Place the T-Tap connector over the front or rear coil wire and close ensuring that the tab is engaged. (See [PIC.6](#))

ATTENTION! Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 9 Insert the purple wire from the control switch into the male Scotch Lock and crimp, making sure that the wire is secure. (See [PIC. 6](#))

STEP 10 Now, hook the purple wire with the male Scotch Lock from the control switch, to the T-Tap that was installed on the coil wire.

STEP 11 Plug the wiring harness from the chasing LED cover into the harness from the switch.

NOTE: Use the included Y Adapter harness if using multiple seven color chasing products on your motorcycle. One controller is capable of handling up to four units.

STEP 12 Secure all wiring away from heat sources and or moving parts using the included cable ties. Melted wire insulation may result in a short circuit.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 13 Reinstall the seat and the side panel.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.


CONTROLLER SWITCH OPERATION

- Flip the switch to the "mode" position and press the selector button to choose either the "chasing mode" or the "steady illumination mode."
- Flip the switch back to the "color" position, and press the selector button to choose the color; the color sequence is as follows:
 1. Red
 2. Lime
 3. Ice White
 4. Sky Blue
 5. Dark Blue
 6. Purple (Violet)
 7. Green
 8. Paint Mode (continuously cycles through all seven colors)
- Flip the switch back to the "mode" position.

Ride On!


Küryakyn[®]

PIC.5

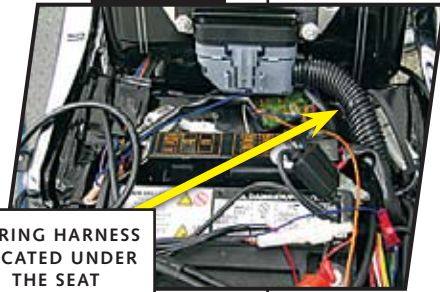

PIC.6

CRIMP THE MALE SCOTCH LOCK TO SECURE THE PURPLE WIRE

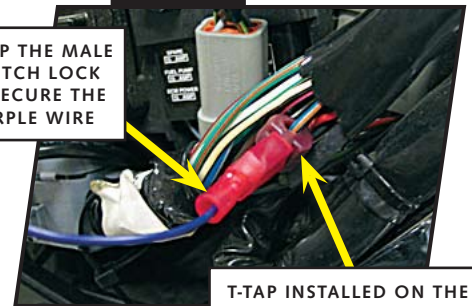

T-TAP INSTALLED ON THE FRONT COIL WIRE (BLUE WITH ORANGE TRACE)

PAGE

3