

Important


The AD-1 Adaptor Harness **MUST be inserted correctly or your Digital Guard Dawg system can burn out.** The AD-1 adaptor harness can be inserted two different ways, You must test your system as described on the back of this card before starting your bike.



FLHR Power Distribution Box




P# 31579-04

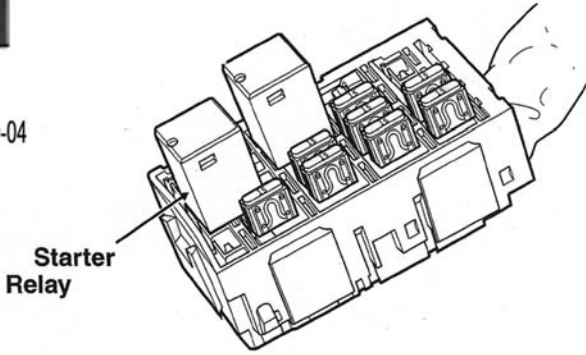


1. Insert AD-1 adaptor end into Starter Relay socket with RED Arrow facing up. (fig.A)

2. Orient the other end of the adaptor as shown. Use a test light to confirm that only the correct socket is **HOT**. (fig.B)

Only this socket should be **HOT** When Ignition is ON and Start Button is Pushed

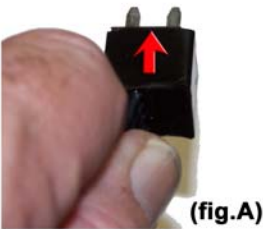


(fig.A)

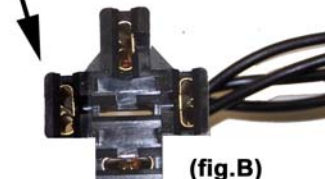

(fig.B)

3. If the indicated socket does not test **HOT**, Flip the end of the Adaptor with the RED arrow over and re-insert. **Repeat Test.**

4. Plug in Digital Guard Dawg Smart Relay as shown and complete install as indicated in owners manual.

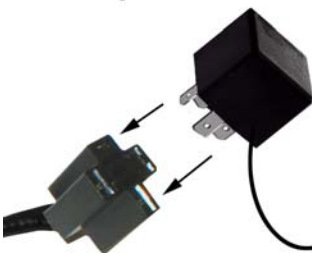

Call us if you have any questions at 916-337-1040

Connect to + Battery