

Street Magic® Cycle Products

Signal Stabilizer™ Installation Instructions

**All 1999 to Present Harley-Davidson models
Except 2004 to Present Sportsters and V-Rod models**

- 1) **Locate stock connector block for taillight/turn signals.**
- 2) **Unplug main harness connector from fender harness connector.**
- 3) **Plug Signal Stabilizer™ in between these two connectors.**
- 4) **Test signals for proper operation. Test Alarm for proper operation, if equipped.**
- 5) **Although most models within this year range will use these instructions, there maybe some units that will require use of the instructions listed below for proper operation.**

**All other years and models of Harley-Davidson motorcycles
not listed above.**


- 1) **Remove connector blocks from Signal Stabilizer™ by cutting Orange, Purple, Brown and Black wires coming from Signal Stabilizer™ as close to connector blocks as possible.**
- 2) **Locate wires going to rear directional lights.**
- 3) **Attach Purple wire from Signal Stabilizer™ unit to left side rear directional wire (Commonly Purple) using Posi-Tap connectors supplied with kit.**
- 4) **Attach Brown wire from Signal Stabilizer™ unit to Right side rear directional wire (Commonly Brown) using Posi-Tap connectors supplied with kit.**
- 5) **Attach Orange wire from Signal Stabilizer™ unit to a keyed 12 volt power source. A good source for this “keyed” power is the wire that supplies the tail light running light circuit (Commonly Blue or Orange)**
- 6) **Attach Black wire from Signal Stabilizer™ unit to a suitable ground source.**
- 7) **Test signals for proper operation.**
- 8) **Test Alarm, if equipped, for proper operation,**

Posi-Tap Instructions





Posi-Tap™ TAP CONNECTOR

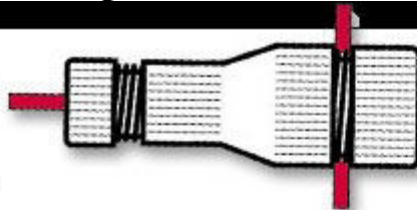

- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- REUSABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED



QUICK & EASY

-  **1** Insert Hot Wire
-  **2** Tighten
-  **3** Strip Leads
-  **4** Insert & Tighten



NO CRIMPING



NO TOOLS NEEDED