



## CD Truck Light Installation Instructions:



### **Contents:**

1 Light Bar

1 3M Promotor Pack

6 Tie Wraps

Optional: 6 Posi-Taps Connectors, 2 Heat Shrink Tubes

1. Select the surface that light bar will be mounted and clean surface with 3M Promoter pack, allow to dry.
2. Remove red adhesive liner and mount light bar onto Truck. If trailer adapter is used, plug adapter into receptacle on truck. Use enclosed tie wraps to secure wires to vehicle.
3. If Posi-Taps are used, connect black wires to vehicle grounds. Solder Single Red Wire (bottom of Y) of Dual Circuit (Y) to one Red wire of Light Bar and cover using supplied Heat Shrink Tubing. Repeat for other side. Connect remaining red wire of Left Y to vehicle left brake/turn wire, connect remaining red wire of right Y to vehicle right brake/turn wire using supplied Posi-Taps Connectors
4. Connect Orange wires to Vehicle running light power source with Posi-Taps. Secure wires.
5. Test operation of light bar in all modes.

**Disclaimer:** Custom Dynamics LLC assumes no liability of any kind as a result of conversions or additions to your vehicle.

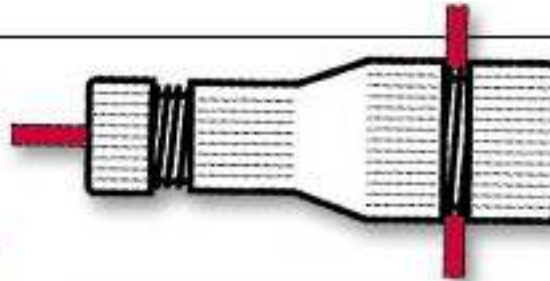
# Posi-Tap™

TAP CONNECTOR




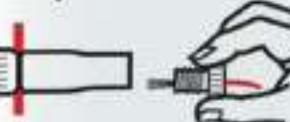


- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- REUSABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED

**POWERS UP TO (4) LEADS  
AT ONCE!**



## QUICK & EASY

-   
1 Insert Hot Wire
-   
2 Tighten
-   
3 Strip Leads
-   
4 Insert & Tighten



**NO CRIMPING**



**NO TOOLS NEEDED**



**Posi-Tap™**  
TAP INTO THE FUTURE

**CLICK HERE FOR A LIVE DEMO.**

TAP INTO THE FUTURE WITH POSI-TAP