



Custom Dynamics® High/Low Adapter Installation Instructions

We thank you for purchasing the Custom Dynamics® High/Low Adapter. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: CDTB-HLA-1


Package Contents:

- Headlamp Adapter Assembly (1)
- Instructions


Fits: **Harley-Davidson®** 1981-2013 Harley-Davidson® Electra Glide/Ultra (FLHT) models including CVO™, 2014-2023 Ultra Limited (FLHTK), 2014-2019 Electra Glide Ultra Classic (FLHTCU), 2015-2016 Ultra Classic Low (FLHTCUL), 2015-2018 Ultra Limited Low (FLHTKL), 2014-2021 CVO™ Limited (FLHTKSE), 1997-2013 Road King (FLHR), Road King Classic (FLHRC), 2021-2023 Road King Special (FLHRXS), 2014 CVO™ Road King (FLHRSE), 2006-2013 Street Glide (FLHX), 2021-2023 Street Glide Special (FLHXS), 2010-2022 CVO™ Street Glide (FLHXSE), 2022-2023 Street Glide ST (FLHXST), 2009-2023 Tri Glide (FLHTCUTG), 2010-2011 Street Glide Trike (FLHXXX), 2020-2022 CVO™ Tri Glide (FLHTCUTGSE), 2015-2019 Freewheeler (FLRT), 2012-2016 Dyna Switchback (FLD) and 1984-2017 Softail models with OEM 7" headlamp bucket. Use two units with TruBEAM® LED Headlamp for Road Glide on 1997-2013 Harley-Davidson® Road Glide Ultra (FLTRU), Road Glide Ultra CVO™ (FLTRUSE) and 1997-2009 Road Glide Standard (FLTR).

Indian®: 2015-2023 Indian® Chieftain, Chieftain Dark Horse, Chieftain Limited, Chieftain Elite, Roadmaster, Roadmaster Dark Horse & Roadmaster Limited, 2016-2023 Springfield, Springfield Dark Horse, 2015-2021 Chieftain Classic, Roadmaster Classic & Roadmaster Elite, 2015-2020 Chief, Chief Classic, Chief Dark Horse, Chief Vintage, 2021 Vintage & Vintage Dark Horse models with Custom Dynamics TruBEAM LED Headlamp.

Yamaha®: 1999-2013 Road Star® models (except Warrior, Tour Deluxe, and MM) and 1998-2011 V-Star® 650/1100 Classic & Silverado

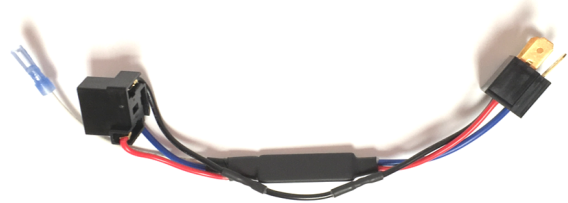

Plug and Play Configuration

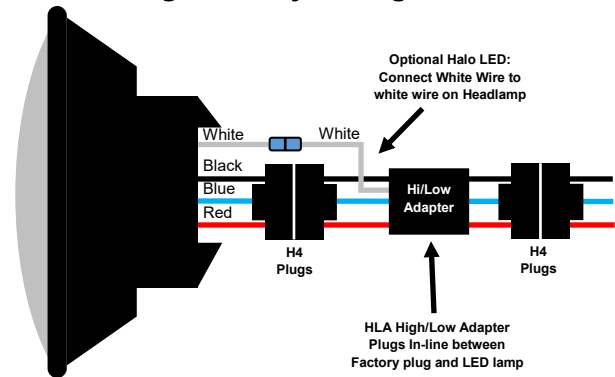

ATTENTION

Please read all information below before Installation

Function Note: This Adapter allows Low beam function during High beam operation. This increases total light output on high beam.

Important: Make sure no wires of the harness can be pinched during installation and that they will not be exposed to water spray, excessive heat or moving parts.

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Installation:

1. Follow the instructions in the Headlamp installation guide for installing headlamp.
2. Plug the Female end of the HLA Adapter into the headlamp. Make sure spade connections are aligned, then use smooth side to side motions until H4 connectors are flush together.
3. Plug the Male end of the HLA Adapter into the Headlamp harness. Make sure spade connections are aligned, then use smooth side to side motions until H4 connectors are flush together.
4. Halo Connection (Optional) : Take the white wire with the spade connector on the CDTB-HLA-1 and plug in the white wire from the headlamp.
5. Follow the directions that came with the headlamp to finish installation.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST