



Custom Dynamics® Dual Color Plasma Rods™ Installation Instructions

We thank you for purchasing the Custom Dynamics® Dual Color Plasma Rods™! Our products utilize the latest technology and high quality components to ensure you the brightest, most reliable LED's on the market. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Package Includes:

- Dual Color Plasma Rods™ (pair)
- Isopropyl Alcohol Wipe (1)
- Posi-Taps® (5)

Optional Items Purchased Separately:

- **MPR-BCM** (adapter for 2014-2021 HD Touring)
- **MPR-SS6** (adapter for 2010-2013 Street Glide®, 2010-2013 Road Glide® Custom
- **MPR-SS8** (adapter for 2010-2012 Street Glide® CVO™, 2009 Road Glide® CVO™, 2012-2013 Road Glide® Custom CVO™ and 2013 Road King® CVO™
- **Universal Adapter** (adapter for 1996-2017 Softails (except Breakout, Slim/Slim-S & Blackline), 1997-2017 Dynas (except FXDB & FXDWG), 1997-2013 Touring (except Street Glide & Road Glide Custom), and 1999-2003 Sportsters, 2010-2013 HD Trikes; 2011-2013 Road Glide Ultra

Fits: Works on all 12VDC negative ground systems

Instructions:

1. Select location for mounting plasma rod™.
2. Clean surface with the provided Isopropyl Alcohol Wipe, allow to dry.
3. Mount Plasma Rod™ with the wire coming out the top. Remove red plastic off 3M™ tape and press Plasma Rod™ in place.
4. Connect Black wire to good ground.
5. Connect Yellow wire to appropriate turn signal wire.
6. Connect to Blue wire to constant running light wire.
7. Connect the Red Wire to the brake wire.
8. Check operation of Plasma Rod™ in all modes.

Posi-Tap™ TAP CONNECTOR

QUICK & EASY

- 1 Insert Hot Wire
- 2 Tighten
- 3 Strip Leads
- 4 Insert & Tighten

- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- REUSABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED


POWERS UP TO (4) LEADS AT ONCE!

NO CRIMPING

NO TOOLS NEEDED

This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.


Note: Install the Plasma Rods with the wire coming out at the top.

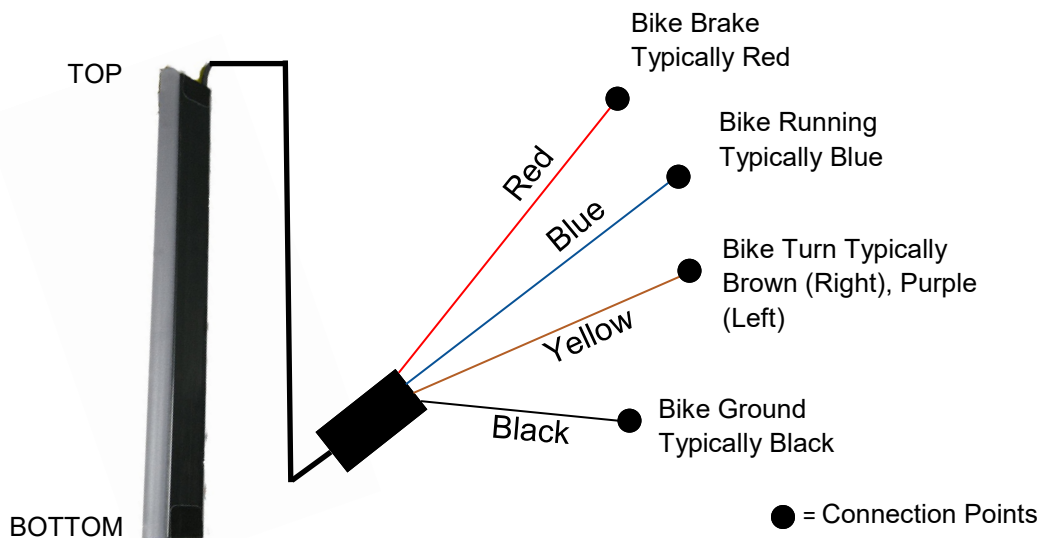

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions Page 2

Using Dual Color Plasma Rods™ on 2014-2021 HD Touring with MPR-BCM Adapter & Turn Signal Decoder (Both Sold Separately)

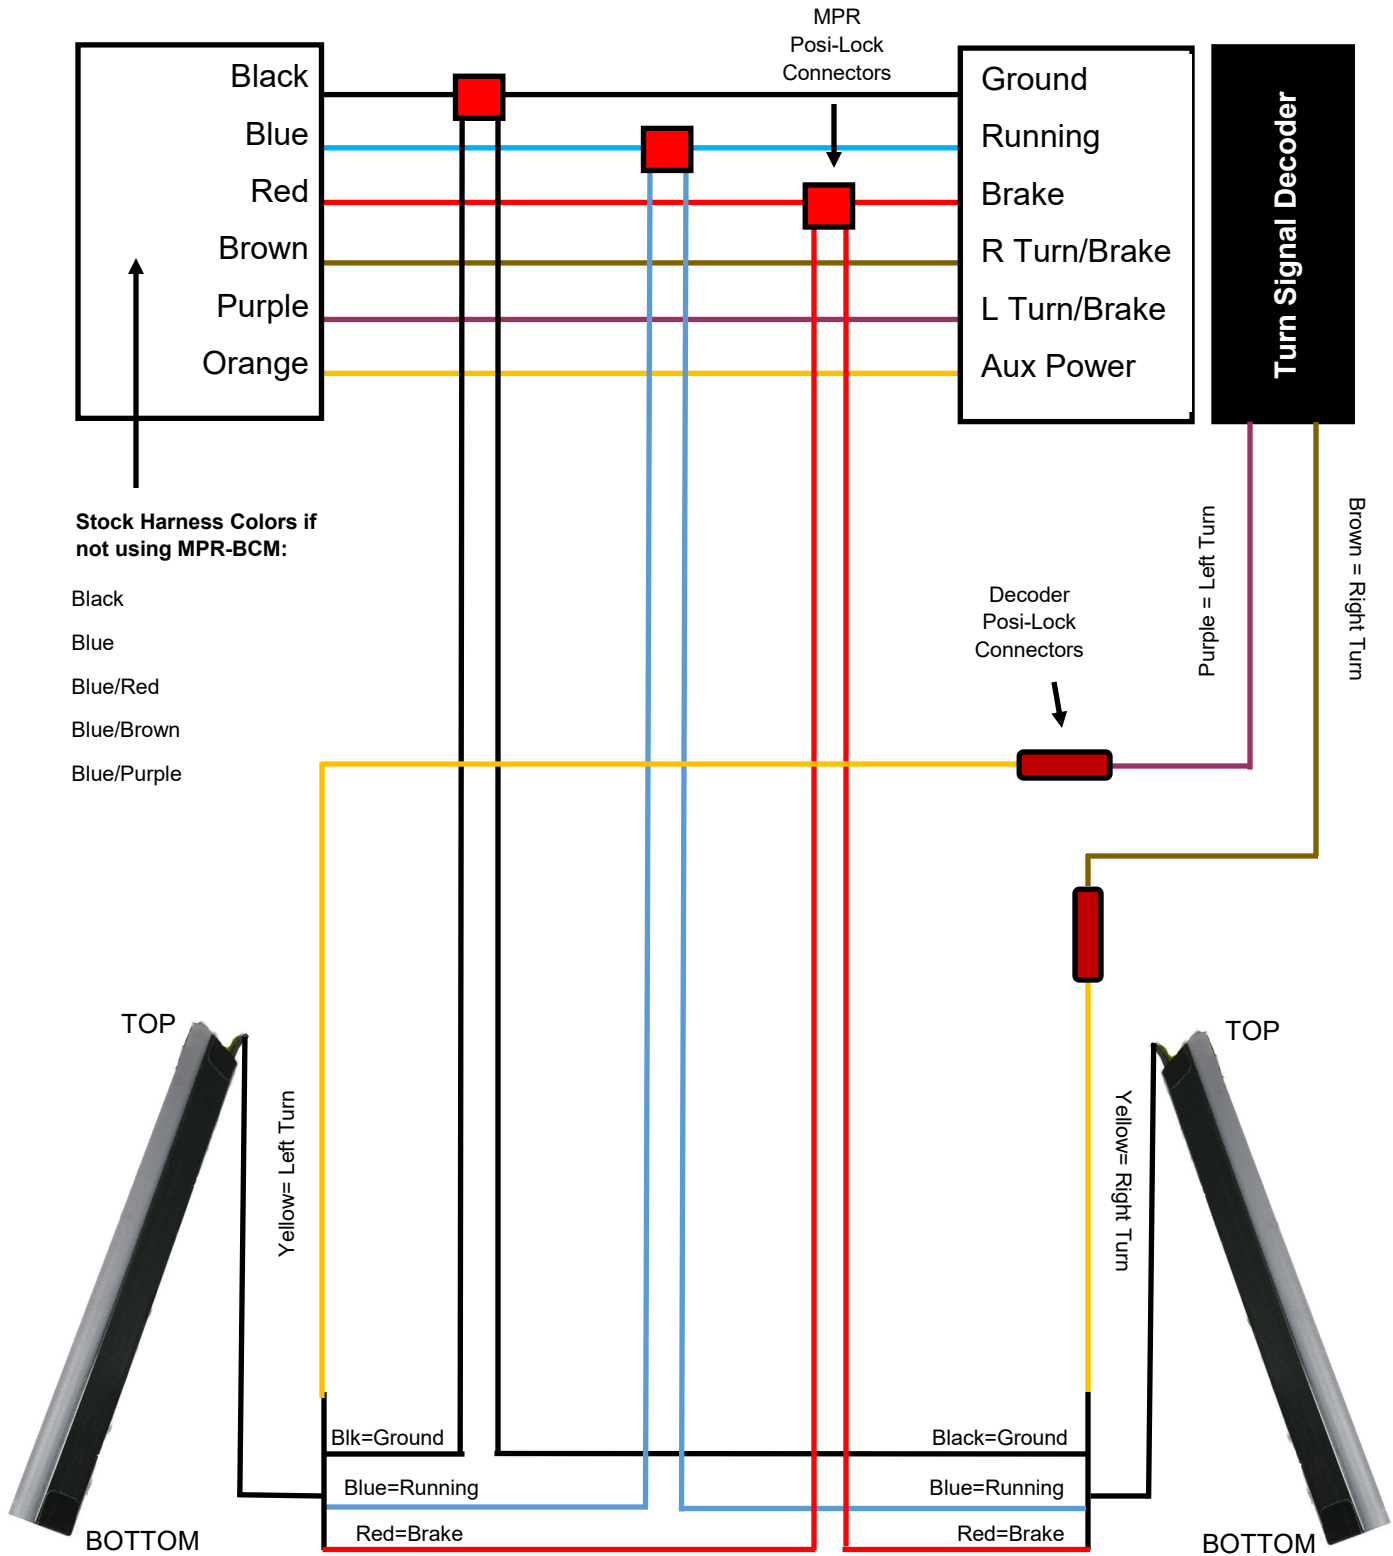

Stock Harness Colors if not using MPR-BCM:

- Black
- Blue
- Blue/Red
- Blue/Brown
- Blue/Purple

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST