

PROBEAM®

BY CUSTOM DYNAMICS®

Custom Dynamics® ProBEAM®

Flat Turn Signal Lens

Installation Instructions

We thank you for purchasing the Custom Dynamics® ProBEAM® Turn Signal Lens! Our LEDs offer maintenance free service and higher visibility. Our ProBEAM® product line utilizes the latest technology and automotive grade components to ensure the highest level of reliable service. Custom Dynamics® offers one of the best warranty programs and customer support in the industry. If you have any questions during the installation of this product please call us at 1(800) 382-1388.

Part Number: PB-F-LENS-CLEAR PB-F-LENS-RED
PB-F-LENS-SMOKE PB-F-LENS-AMBER



Package Contents:

- ProBEAM® Flat Lens (2)
- Lens O-Ring (2)
- Mounting Screw with O-Ring (4)

Fitment: 1986-2013 Harley-Davidson® Electra Glide Classic (FLHTC), Electra Glide Standard (FLHT), Ultra Classic (FLHTCU), Ultra Limited (FLHTK), 1986-2022 Road King (FLHR), Road King Classic (FLHRC), 1986-2017 Heritage Classic (FLSTC) and 1999-2003 Road Glide (FLTR). Replacement for OEM 68440-86.

Installation:


1. Remove the existing lens from turn signal housing by removing the two screws.
2. Clean any dirt or debris from turn signal housing
3. Install the provided O-rings on the lens and the two provided mounting screws as shown in Photo 1.
4. Install the lens and firmly tighten the two screws (overtightening the screws will crack the lens).



Please read all information below before installation

Note:

- Use care in removing the OEM lens from the housing, so as not to scratch or mar the chrome housing. Custom Dynamics® is not liable for damage to chrome housing during installation.

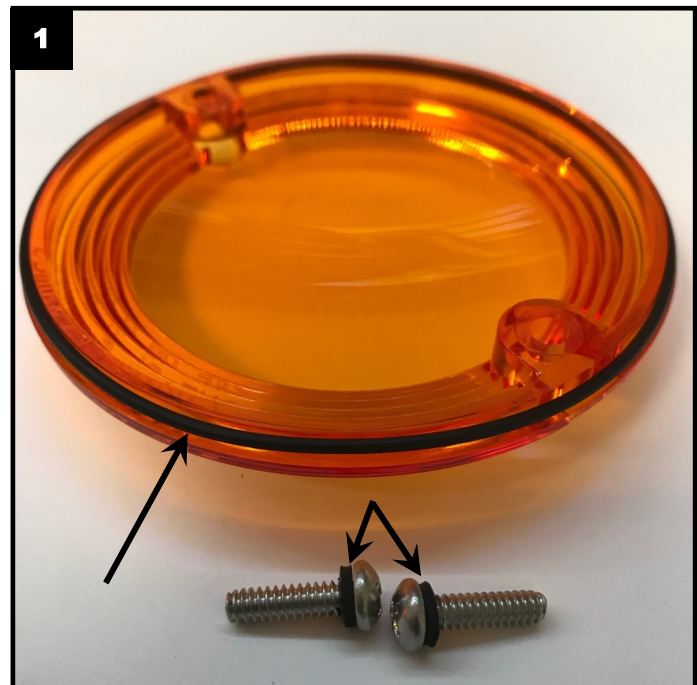

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST