



Custom Dynamics® ProBEAST® Air Horn Installation Instructions

We thank you for purchasing the Custom Dynamics® ProBEAST® Air Horn! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: PB-AH-B PB-AH-C

Package Contents:


- ProBEAST® Horn w/ built in fuse and relay (1)
- 5.5" Tie Wraps (8)
- Heat Shrink Tubing (2)



All 2023-Earlier Harley-Davidson® Electra Glide/Ultra (FLHT), Road Glide (FLTR), Street Glide (FLHX) and Road King (FLHR) models including CVO™, 2009-2023 Tri Glide Ultra (FLHTCUTG), 2010-2011 Street Glide Trike (FLHXXX), 2020-2022 CVO™ Tri Glide (FLHTCUTGSE), 2015-2023 Freewheeler (FLRT), 2023 Road Glide 3 (FLRTR), 2022-Earlier Sportster 1200 Custom (XL1200C), Super Low (XL1200T) and Seventy-Two (XL1200V), 2017-Earlier Dyna models (Except 2014-2017 FXDL/FXDLS), 2017-Earlier Softail models (Except FXSB/FXSE, FXS, FXCW/FXCWC).

Installation:

1. Remove the seat and disconnect the negative battery cable.
2. Remove the existing horn, do not remove the mounting stud and isolator bushing, See Photo 1. Removing the isolator bushing will void the warranty of the ProBEAST® horn.

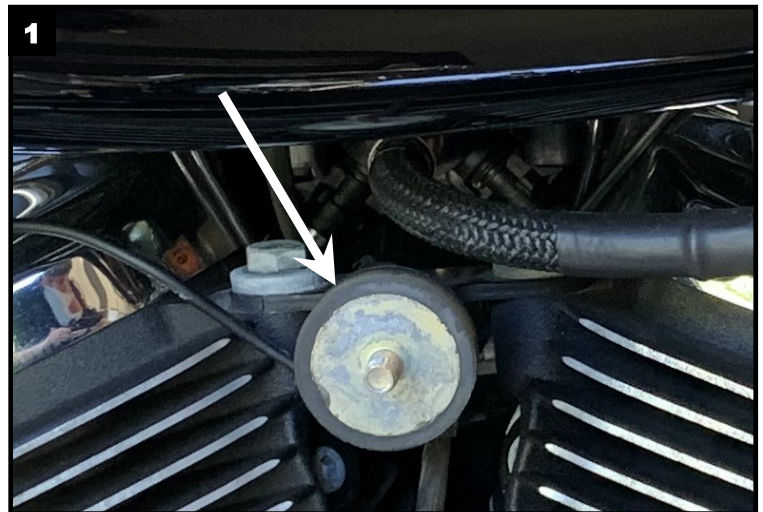

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Attention: The wiring kit provided isolates the ProBEAST® Air Horn electrical from any of the Harley Davidson electrical components. We only use the on/off aspect of the stock horn button, which turns the ProBEAST® relay on/off. This wiring kit also provides a more direct power source to the compressor and insures you have the loudest horn in the motorcycle industry.

Attention: ProBEAST® Air Horn must be used with the stock rubber isolator bushing that came with your stock horn. Not doing so will void the warranty.

Note: ProBEAST® Air Horns are not compatible with Love Jugs.



3. Slide the provided heat shrink over both negative and positive wires and connectors . Plug positive (red wire) from ProBEAST® into positive horn wire of the bike (typically red). Plug negative wire from ProBEAST® into the negative horn wire of the bike (typically black), See Photo 2.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

Installation Continued:

4. Slide the heat shrink tubes over both spade connections. Apply heat to both Heat shrink tube with a heat gun or hair dryer.
5. Mount horn using stock mounting nut to secure, See photo 3.
6. Route the fused wire along frame and under the tank towards the battery.
7. Connect the eyelet of the fused wire from the ProBEAST® horn to the Positive terminal of the battery.
8. Using the provided wire ties, secure the wiring to prevent the wire from becoming pinched or damaged.
9. Reconnect the Negative battery cable.
10. Test the ProBEAST® horn for proper operation before riding.

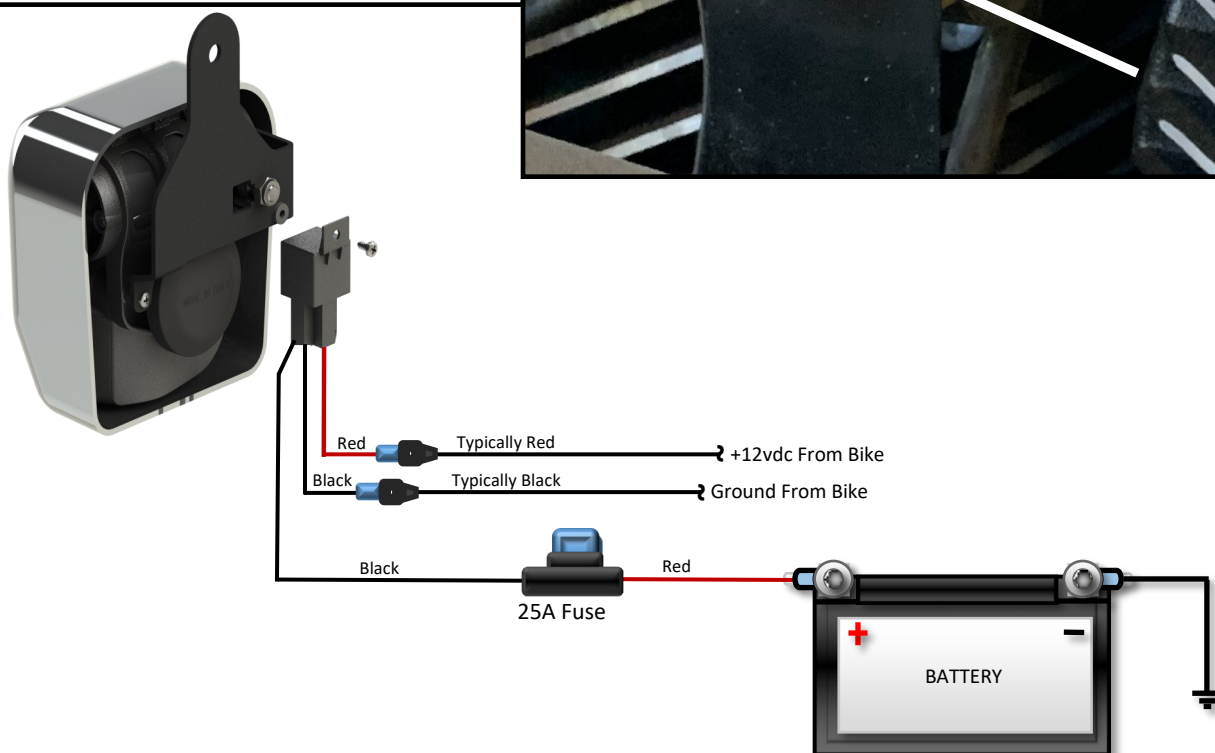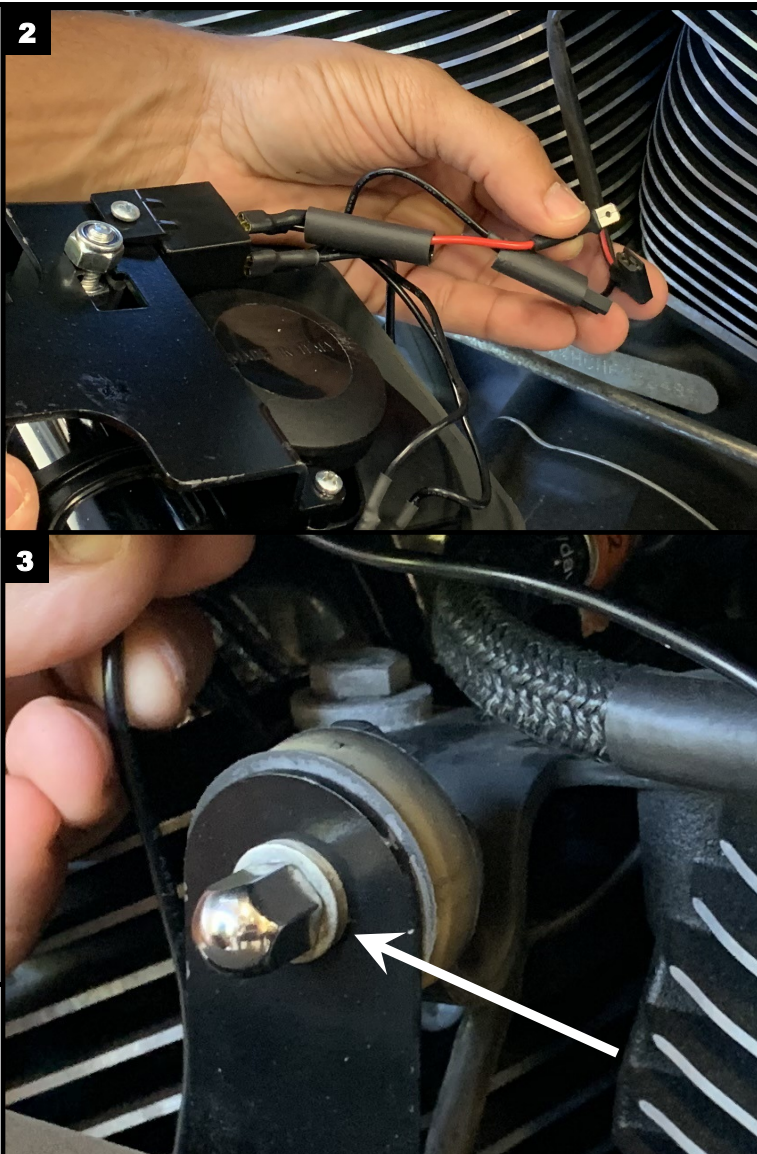

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST