



Custom Dynamics® Dual Color Plasma Rods™ Installation Instructions

We thank you for purchasing the Custom Dynamics® Dual Color Plasma Rods™! Our products utilize the latest technology and high quality components to ensure you the brightest, most reliable LED's on the market. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Package Includes:

- Dual Color Plasma Rods™ (pair)
- Adhesive Primer (1)
- Posi-Taps® (5)


Optional Items Purchased Separately:

- **MPR-BCM** (adapter for 2014-2019 HD Touring)
- **MPR-SS6** (adapter for 2010-2013 Street Glide®, 2010-2013 Road Glide® Custom
- **MPR-SS8** (adapter for 2010-2012 Street Glide® CVO™, 2009 Road Glide® CVO™, 2012-2013 Road Glide® Custom CVO™ and 2013 Road King® CVO™
- **Universal Adapter** (adapter for 1996-2017 Softails (except Breakout, Slim/Slim-S & Blackline), 1997-2017 Dynas (except FXDB & FXDWG), 1997-2013 Touring (except Street Glide & Road Glide Custom), and 1999-2003 Sportsters, 2010-2013 HD Trikes; 2011-2013 Road Glide Ultra

Fits: Works on all 12VDC negative ground systems

Instructions:

1. Select location for mounting plasma rod™.
2. Clean surface with alcohol and apply the adhesive primer, allow to dry.
3. Mount Plasma Rod™ by removing red plastic off 3M™ tape and pressing Plasma Rod™ in place.
4. Connect Black wire to good ground.
5. Connect Yellow wire to appropriate turn signal wire.
6. Connect to Blue wire to constant running light wire.
7. Connect the Red Wire to the brake wire.
8. Check operation of Plasma Rod™ in all modes.




Posi-Tap™
TAP CONNECTOR

- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- REUSABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED

POWERS UP TO (4) LEADS AT ONCE!

QUICK & EASY

- 1 Insert Hot Wire
- 2 Tighten
- 3 Strip Leads
- 4 Insert & Tighten




NO CRIMPING

NO TOOLS NEEDED

This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

Note: If wiring to the bike's wire harness under the seat, install the Plasma Rods with the wire coming out at the top.


Note: If wiring to a Tri-Bar, install the Plasma Rods with the wires coming out at the bottom.

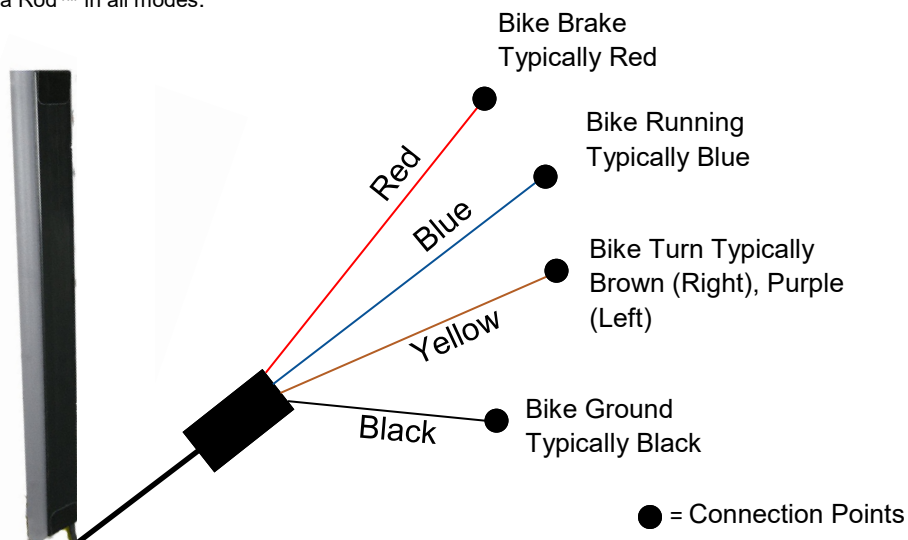

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions Page 2

Using Dual Color Plasma Rods™ on 2014-2019 HD Touring with MPR-BCM Adapter & Turn Signal Decoder (Both Sold Separately)

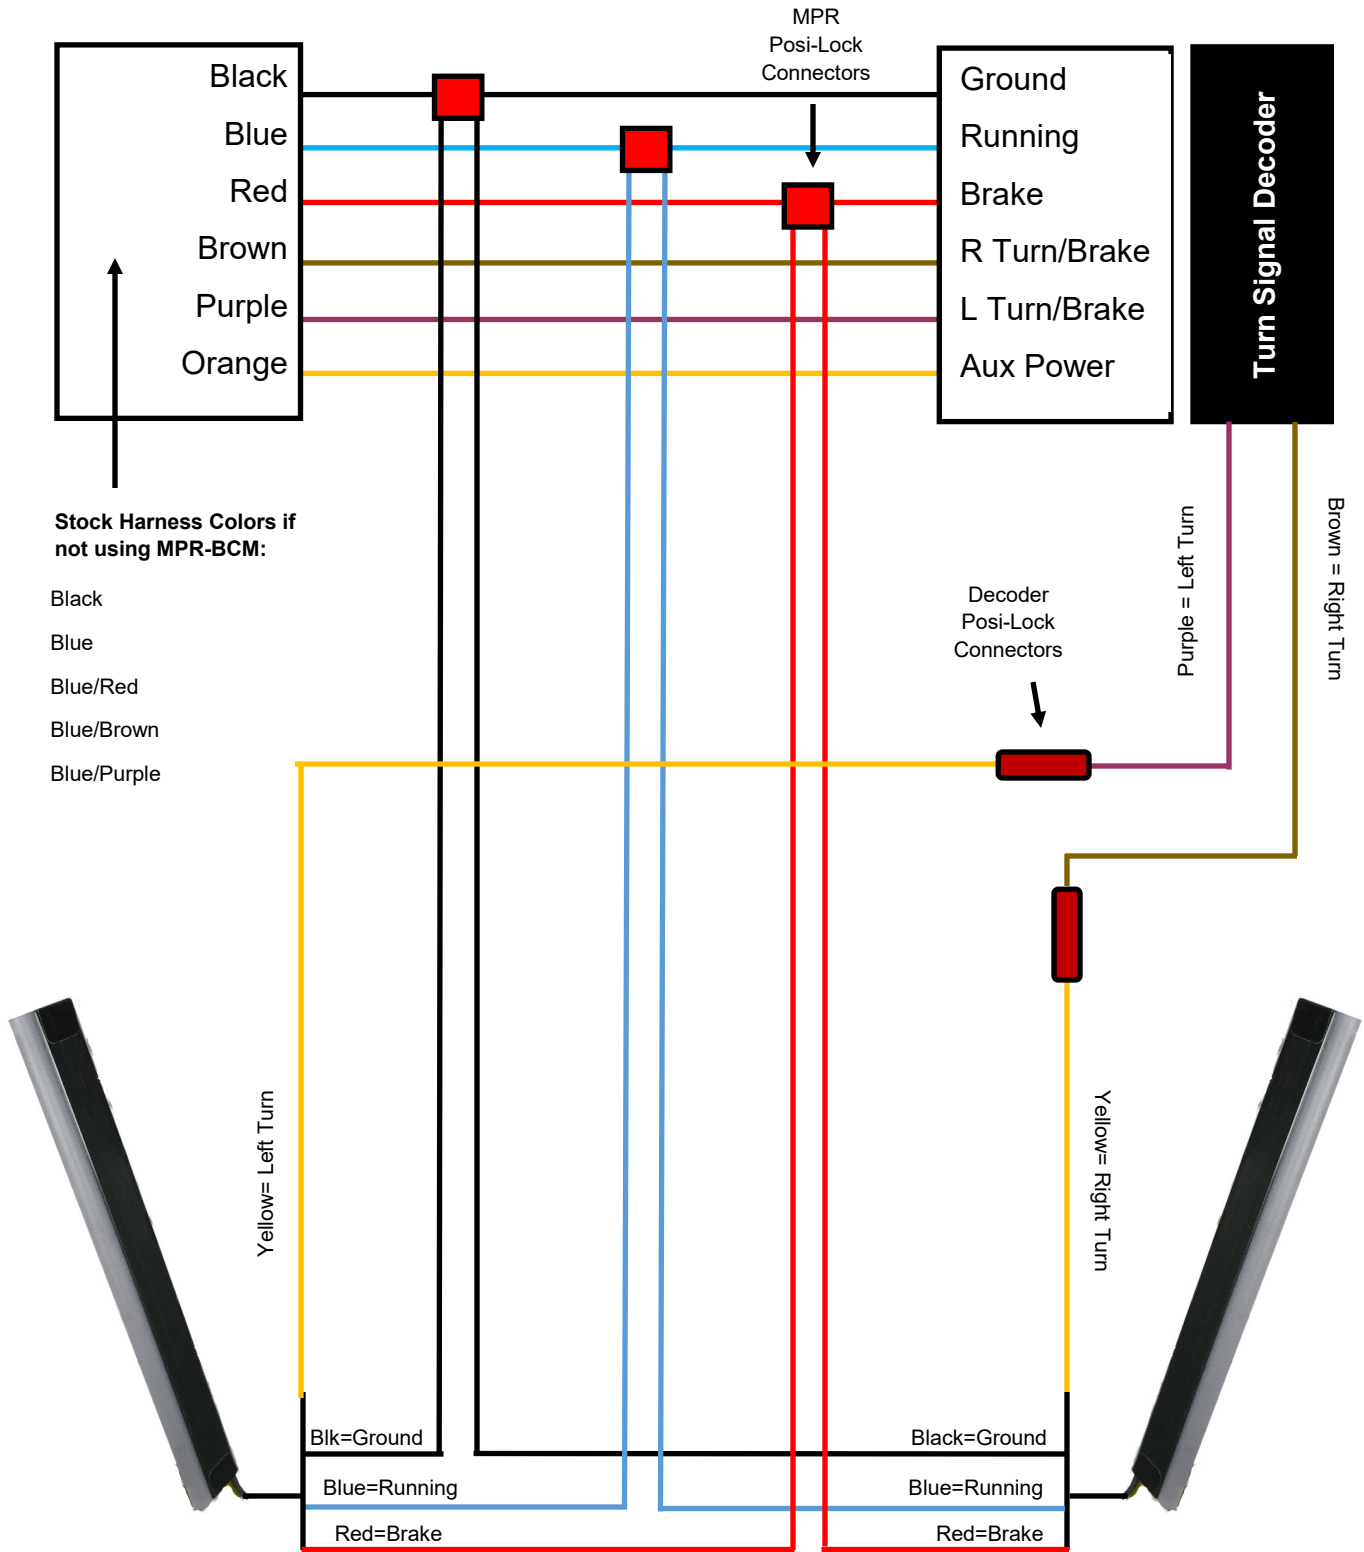

Stock Harness Colors if not using MPR-BCM:

- Black
- Blue
- Blue/Red
- Blue/Brown
- Blue/Purple

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST