



Custom Dynamics® LRST Center Vent Installation Instructions

We thank you for purchasing the Custom Dynamics® LRST Center Vent. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-LRST-C-V-B

Package Contents:

- LRST Center Vent (1)
- Instructions (1)

Fits: 2022-2024 Low Rider ST (FXLRST) and 2022 Low Rider El Diablo (FXRST).



ATTENTION


Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Installation:


1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove outer fairing by removing 6 windshield screws shown in **Figure 1**. Lift to remove windshield and store in a safe place to prevent damage.
3. Remove outer fairing screws shown in **Figure 2**.

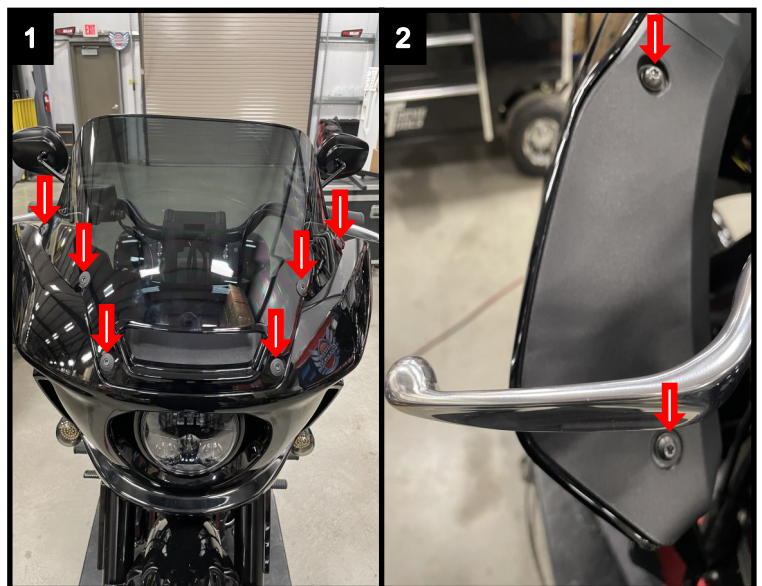


Questions? Email: Info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2


4. Remove fairing air deflector screws shown in **Figure 3**.

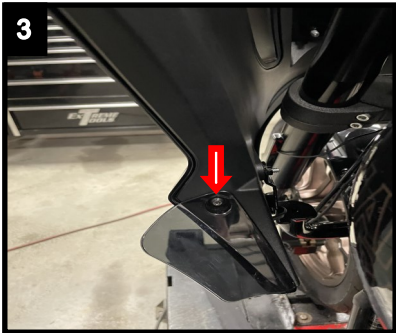

5. Pull outer fairing away from inner fairing and unplug headlight connector shown in **Figure 4**. Remove outer fairing and store in a safe place to prevent damage.

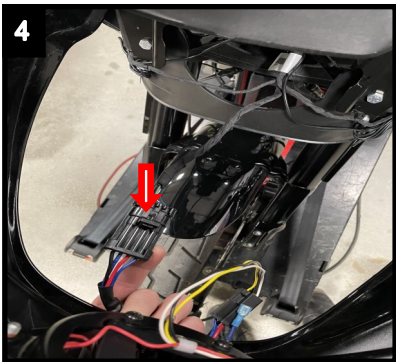

6. Clean lower area of vent opening on the motorcycle with denatured alcohol, let dry 1-2 minutes.
7. Remove the protective red film from the back of the LRST Center Vent and install onto vent opening on the motorcycle. Shown in **Figure 5**.

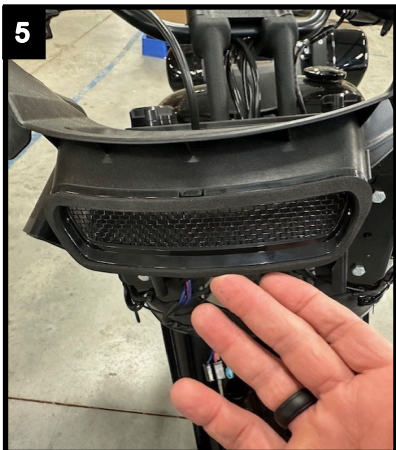

8. Reinstall outer fairing and windshield in reverse order that they were removed. **Note: The outer fairing will help hold the LRST Center Vent in place shown in Figure 6.**



9. Replace all necessary parts and reconnect the battery negative cable.
10. Test operation of headlight.