



Custom Dynamics® Magic Strobes™ Brake Flasher Installation Instructions

We thank you for purchasing the Custom Dynamics® Magic Strobes™ Brake Flasher. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: MAGIC-STROBE-XG

Package Contents:

- Magic Strobes™ Brake Flasher (1)
- Instructions

Fits: 2015-2019 Harley-Davidson® XG500, XG750 (Does Not Fit XG750A)



ATTENTION

Please read all warning information below before installation

Important: Module must be secured after installation. Find safe area away from any moving parts and out of the way of normal operation of the bike. Use the enclosed tie-wraps to secure. Custom Dynamics® is not liable for damage as a result of improperly securing or failing to secure the module.

Important: Dial and switches should be maneuvered by hand only. Do not use any tool such as a screwdriver that could damage waterproof covers.

Important: When Changing settings on Magic Strobes™ module, bike power must be OFF.

Important: Customers using this module with standard incandescent bulbs should use patterns 0-3 only. Any other settings selected will result in diminished performance. All strobe patterns are compatible with the use of LED's.


Caution: A stuck brake switch may cause this unit to overheat and fail. Unplug module immediately if this condition occurs.

Notice: Product is Not DOT approved.



Installation:

1. Secure motorcycle on level surface. Remove seat. Disconnect negative battery cable from the battery. Locate and unplug the lighting connector to the rear fender.
2. Plug the Magic Strobes™ Brake Flasher, in-line, into the rear lighting harness and the bike's main wiring harness located under the seat. Refer to photo #1.

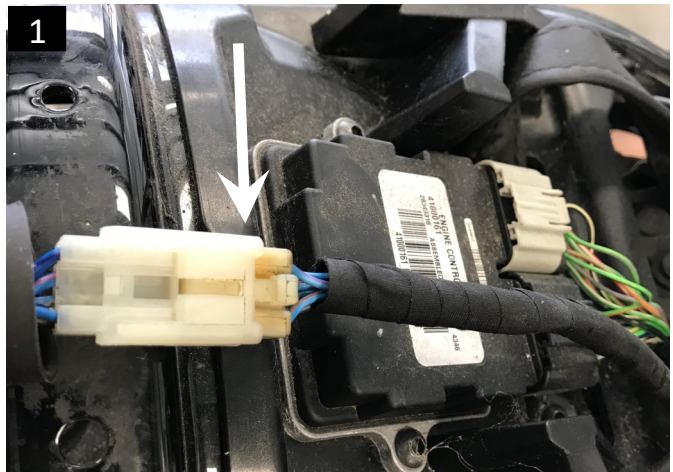

3. Re-connect the battery's negative battery cable to the negative of the battery.
4. Locate a secure place for the Smart Triple Play® unit that will not interfere with the secure placement of the seat or side cover. Secure with tie-wraps, tape or other means so that unit will not move.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

Flash Pattern Information:

