




Custom Dynamics® Turn Signal Decoder Installation Instructions

We thank you for purchasing the Custom Dynamics® Turn Signal Decoder. Our products utilize the latest technology and highest quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: GEN-TSD

Package Contents:

- Turn Signal Decoder (1)
- Posi-Tap™ (2) Attached

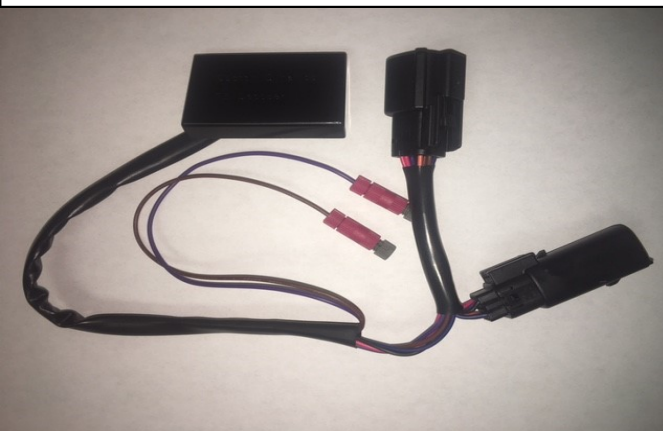

Fits: 2014-2020 Harley-Davidson® Street Glide (FLHX), Street Glide Special (FLHXS), Road Glide (FLTRX), Road Glide Special (FLTRXS), Road Glide Ultra (FLTRU), Road Glide Limited (FLTRK), Road King Special (FLHRS), Ultra Classic (FLHTCU), Ultra Classic Low (FLHTCUL), Ultra Limited (FLHTK), Ultra Limited Low (FLHTKL), 2016-2020 Ultra Limited CVO (FLHTKSE) and 2016 Road Glide Ultra CVO (FLTRUSE).

Installation:

1. Remove the seat and locate connector for rear wiring harness.
2. Unplug connector and plug in Turn Signal Decoder, female of the Turn Signal Decoder to the male of the bike's wiring harness and the male of the Turn Signal Decoder to the female of the rear wiring harness.
3. Using the provided Posi-Taps™, attach positive wire of the turn signals to the purple and brown wires :
 - Purple - Left Turn
 - Brown - Right Turn
4. Connect the negative wire of the turn signals to a suitable ground connection.
5. Check operation of all lights.
6. Re-install seat.



ATTENTION



Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Make sure the bike is parked on a level surface and bike's mechanical components are cool to the touch.

Posi-Tap™
TAP CONNECTOR

QUICK & EASY

- 1 Insert Hot Wire
- 2 Tighten
- 3 Strip Leads
- 4 Insert & Tighten

- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- REUSABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED

POWERS UP TO (4) LEADS AT ONCE!

NO CRIMPING

NO TOOLS NEEDED

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST