

PROBEAM®

BY CUSTOM DYNAMICS®

Custom Dynamics® ProBEAM® Amber 1156 LED Flat Turn Signals Installation Instructions

We thank you for purchasing the Custom Dynamics® ProBEAM® Amber 1156 LED Turn Signals! Our LEDs offer maintenance free service and higher visibility. Our ProBEAM® product line utilizes the latest technology and automotive grade components to ensure the highest level of reliable service. Custom Dynamics® offers one of the best warranty programs and customer support in the industry. If you have any questions during the installation of this product please call us at 1(800) 382-1388.

Part Number: PB-A-1156-T (2020-1677)

Package Contents:

- ProBEAM® Flat Turn Signals (1 pair)
- Amber Lenses (2x)

US Patent 851817, 851,327

Chinese Patent ZL-201830409102.8, ZL-201830409095.1



Fitment: 1986-2013 Harley-Davidson® Electra Glide Classic (FLHTC), Electra Glide Standard (FLHT), Electra Glide Ultra Classic (FLHTCU), Ultra Limited (FLHTK), 1986-2020 Road King (FLHR), Road King. Harley-Davidson® International (HDI) models with 1156 single contact turn signal bases. Does NOT Fit CVO™ Models.

Installation:

1. Remove the existing lens from turn signal housing by removing the two screws.
2. Remove existing bulb from turn signal housing.
3. Remove any corrosion or dielectric grease from the socket to insure the socket contacts are clean.
4. Confirm the proper orientation of the socket base and insert the base into the socket. If it seems hard to twist the base in the socket or hard to remove, it is probably orientated the wrong way.
5. Twist the LED turn signal a few rotations to coil wire from the turn signal to the socket base (Figure 1).



Please read all Information below before Installation

Note:

- Use care in removing the OEM lens and bulbs from the housing, so as not to scratch or mar the chrome housing. Custom Dynamics® is not liable for damage to chrome housing during installation.
- Dielectric grease does not need to be used with this LED product, it can actually prevent them from working. Remove any excess grease from your turn signal sockets before inserting.

*****IMPORTANT*****

CAN Bus Models: This LED product is BCM compliant. However, you must run the 4 way hazard flashers for 3 minutes with the ignition in the OFF position to allow the BCM to sync the new LED turn signals load after they are installed.

Non CAN Bus Models: A SMART Signal Stabilizer® or Load Equalizer is required to ensure proper turn signal function and have the proper flash speed.



Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

Installation Continued:

6. Align the adapter to the housing and press slightly to get started, do not press into place (Figure 2).




7. Use the Lens to push the adapter into place and fully seat into housing (Figure 3).



8. Remove the lens and check that adapter is secure, if not remove and adjust tabs and repeat steps 6 and 7. Adapter should be snug but not tight.

9. Install the provided O-rings on the lens and the two mounting screws removed in Step 1 (Figure 4).
10. Install the lens and firmly tighten the two screws (over-tightening the screws will crack the lens).
11. Check operation of turn signals in all modes.

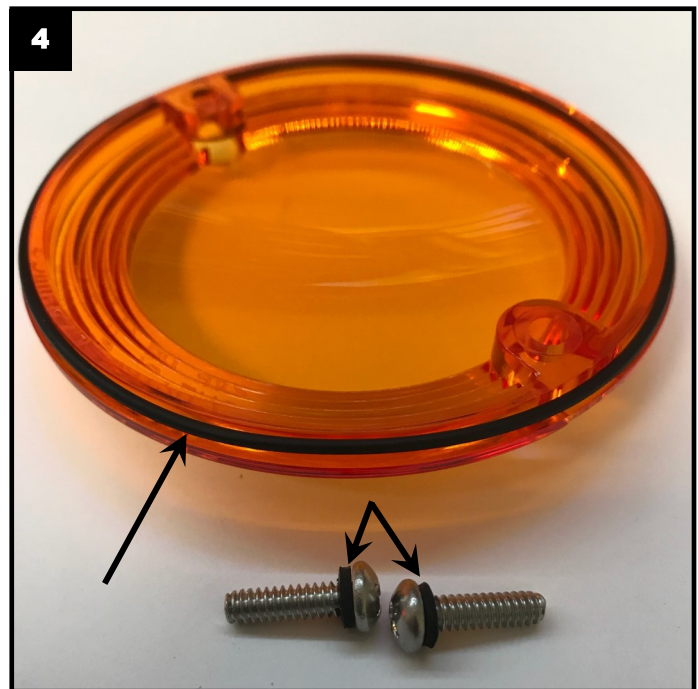

PROBEAM[®]
BY CUSTOM DYNAMICS[®]