



Custom Dynamics® ProBEAM® LED Headlamp Installation Instructions

We thank you for purchasing the Custom Dynamics® ProBEAM® LED headlamp! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: PB-7-IND-B PB-7-IND-C

Package Contents:

- ProBEAM® LED Headlamp (1)
- Instructions

Fitment:

2015-2020 Indian® Chief®, Springfield™, Chieftain®, and Roadmaster® Models (DOES NOT fit Scout® or FTR™ models).

Additional MX150 Indian Headlamp Adapter Required for most 2020 Indian® models (sold separately).



ATTENTION



Please read all Information below before Installation

Important: Due to the increased light output from this unit, it is recommended you take the vehicle to a dealer to have the headlamp properly adjusted. Weight and tire pressure can affect the position of the light.

Warning: To prevent possible electrical shock, disconnect the negative battery terminal before installing this product.




Installation:

1. Disconnect the vehicle negative battery cable.
2. Refer to the factory service manual for instructions on replacing the factory headlamp.
3. Remove the factory headlamp from vehicle.
4. Connect the ProBEAM® headlamp to the existing factory H4 plug.
5. Re-assemble headlamp per the instructions in the factory service manual. Make sure the wires or any components of the harness can not be pinched during installation and that they will not be exposed to water spray, excessive heat or moving parts.
6. Re-connect vehicle negative battery cable to the battery.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

LED Replacement with H4 Plug

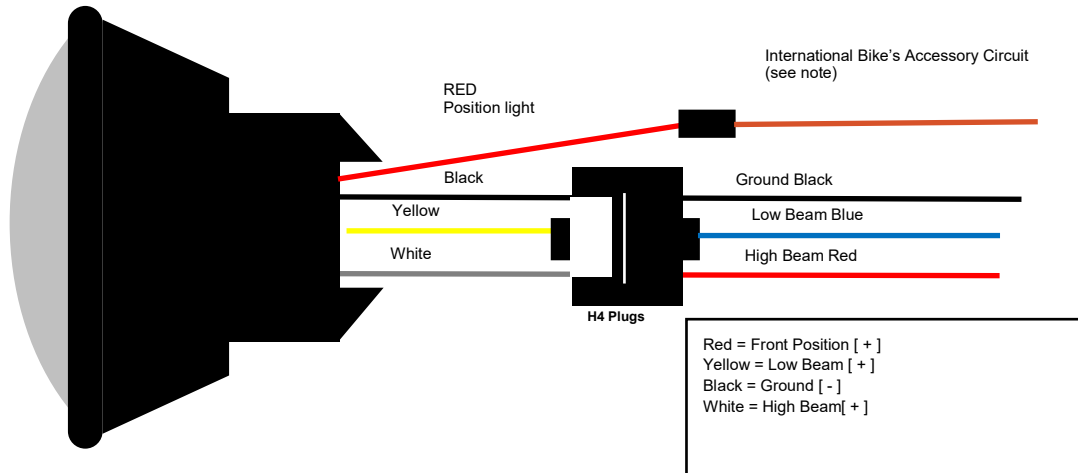

Note: The Red (position light or city light) wire is intended for international application where a position light to be illuminated in the headlight while the bike is parked on the street is required.

The Red wire will connect to the accessory circuit of the bike's wiring harness and will illuminate when the ignition switch is in the accessory position.

U.S. models will not use this function and the wire should be capped and secured to the headlight harness with wire ties.

PROBEAM[®]
BY CUSTOM DYNAMICS[®]

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST