

PROBEAM®

BY CUSTOM DYNAMICS®

ProBEAM® Indian® Passing Lamp Adapter Installation Instructions

We thank you for purchasing the Custom Dynamics® Indian® Passing Lamp Adapter. Our products utilize the latest technology and highest quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support. If you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.


Part Number: PB-IPLA

Package Contents:

- ProBEAM® Indian® Passing Lamp Adapter (2)

Fitment: 2015-2020 Indian® Chief Vintage, Roadmaster Models (except 2020 Roadmaster Dark Horse) and Springfield models (except 2020 Springfield Dark Horse); 2018-2020 Chieftain Classic and 2015-2018 Chieftain, Chieftain Dark Horse, Chieftain Limited.

Note: The PB-IPLAs are designed be used with ProBEAM® Passing Lamps only.

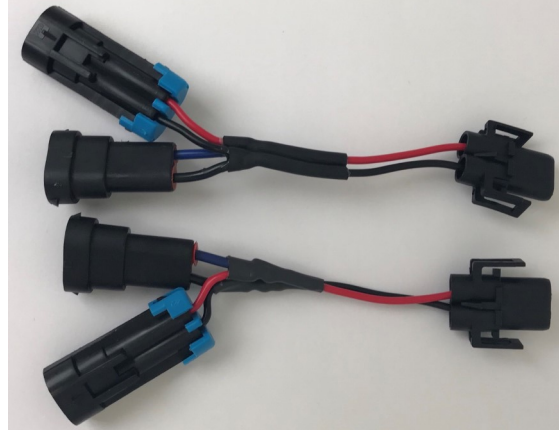

ATTENTION



Please read all Information below before Installation

Warning: Disconnect the negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.


Safety First: Make sure the bike is parked on a level surface and bike's mechanical components are cool to the touch.

Notice: Always wear appropriate safety gear including safety glasses when soldering or performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Read all directions before starting project.

Installation:

1. Install the PB-IPLA between the ProBEAM® Passing Lamp and the bikes factory Passing Lamp harness. The PB-IPLA will have one unused plug connection depending on if your model came with factory LED or Incandescent Passing Lamps. Refer to Figure 1 for PB-IPLA connections.
2. Ensure no wires or any components of the harness or adapter can be crushed or pinched during installation.
3. Test lighting in all modes.

Figure 1

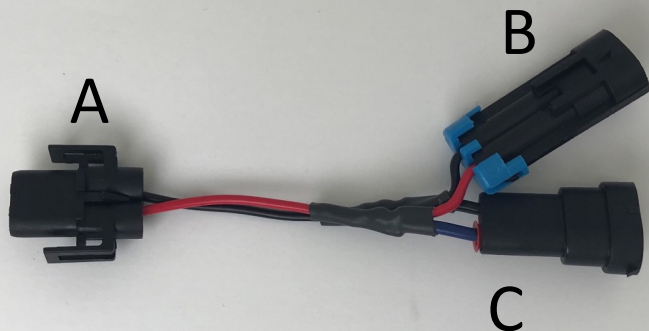

Models with Factory installed LED Passing Lamps:

- A Connect to Probeam® Passing Lamp
- B Connect to Factory Passing Lamp Harness
- C Not Used

Models with Factory installed Incandescent Passing Lamps:

- A Connect to Probeam® Passing Lamp
- B Not Used
- C Connect to Factory Passing Lamp Harness

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST