

PROBEAM®

BY CUSTOM DYNAMICS®

Custom Dynamics® ProBEAM® 7" Adaptive LED Pedestal Mount Headlamp Installation Instructions

We thank you for purchasing the Custom Dynamics® ProBEAM® LED Pedestal Mount Headlamp! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: PB-7PA-B PB-7PA-C

Package Contents:

- ProBEAM® 7" Adaptive LED Pedestal Mount Headlamp (1)
- Instructions

Fits: Pedestal mount accepts most 3/4" headlight mounting blocks.



ATTENTION



Please read all Information below before Installation

Important: Due to the increased light output from this unit, it is recommended you take the vehicle to a dealer to have the headlamp properly adjusted. Weight and tire pressure can affect the position of the light.

Warning: To prevent possible electrical shock, disconnect the negative battery terminal before installing this product.


Note: The Red (position light or city light) wire is intended for international application which may require a position light to be illuminated in the headlight while the bike is parked on a street. It will be connected to the accessory circuit of the bike's harness and will illuminate when the ignition is placed in the accessory position.

U.S. Bikes will not need this and it should be secured to the headlight harness with wire ties.

Installation:

1. Disconnect the vehicle battery negative [-] terminal.
2. Review detailed service manual for instructions on replacing factory headlight.
3. Remove the factory headlight from vehicle.
4. Connect the ProBEAM® headlamp wires to the motorcycle per the Wire Function Diagram. Make sure no wire or any components of the harness can be pinched during installation and that they will not be exposed to water spray, excessive heat or moving parts.

Wire Function Diagram

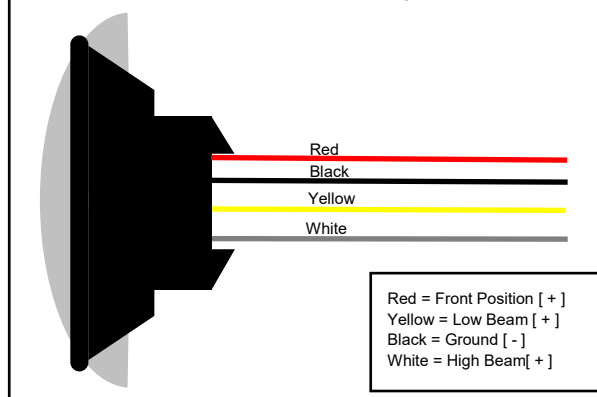

5. Install the headlight with the existing hardware.
6. Re-connect vehicle battery negative [-] terminal.
7. Test high and low beam functions of headlamp.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST