




Custom Dynamics® 7" Low Profile Light Bar Installation Instructions

We thank you for purchasing the Custom Dynamics® 7" Low Profile Light Bar. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-LB-7-RR
CD-LB-7-RS

Package Contents:

Low Profile Light Bar (1)
Isopropyl Alcohol Wipe (1)

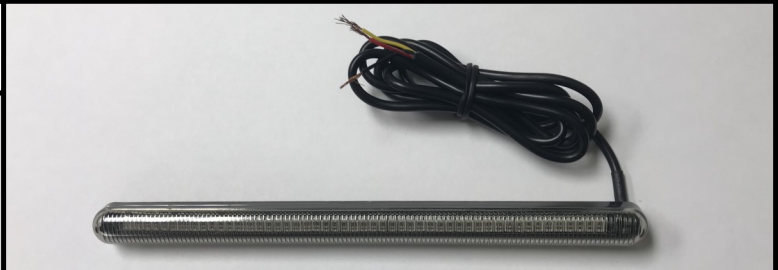

Fits: Universal; 12VDC Systems with a negative ground.

Installation:

1. Select desired mounting location to install the Low Profile Light Bar. Keep in mind the Low Profile Light Bar requires a flat surface for maximum tape adhesion.
2. Drill a 3/16" hole(s), if necessary, in the mounting surface to allow the wiring from the Low Profile Light Bar to pass through the mounting surface.
3. Clean the mounting location with the provided Isopropyl Alcohol Wipe.
4. Remove the Red backing from the Tape and carefully mount in the desired location. Take care in this step as once the tape adheres to the surface, it will be very hard to remove and can not be re-applied.
5. Inspect the vehicle and plan the route the wiring will make to the connection point. Consult vehicle detailed service manual for vehicle wiring information and wire color codes. Use a meter or test light to verify vehicle wire functions before connecting.
6. Secure wiring so that it does not become pinched, cut or frayed. The wiring should not be in contact with any moving or high heat parts.
7. Connect to vehicle lighting circuits for desired operation, see Wiring Diagram below for wiring connections.
8. Test all lighting for proper operation.



ATTENTION


Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

Important: Ambient install temperature must be 60 degrees F or higher. Allow 24 hours for tape to cure before washing or prolonged use of vehicle.

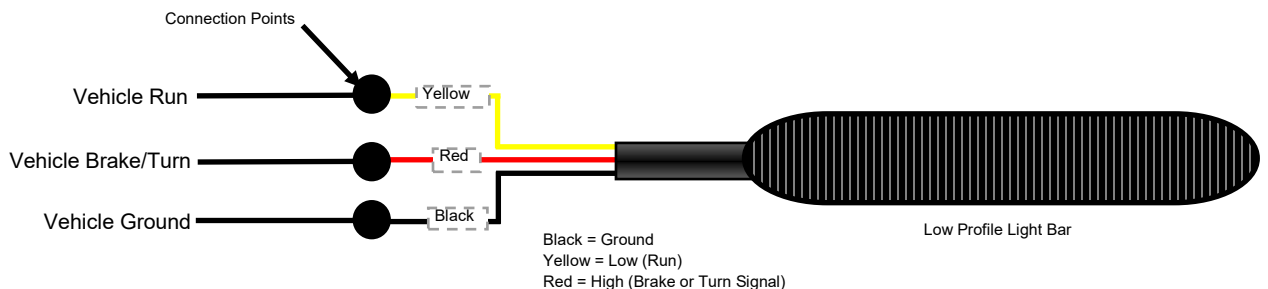

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST