



Custom Dynamics®
Tombstone Taillight
Installation Instructions

We thank you for purchasing the Custom Dynamics® Tombstone Taillight! Our LEDs offer maintenance free service and higher visibility. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: CD-Tombstone

Package Contents:

- Tombstone Taillight

Fitment: All 1997 and later Harley-Davidson® Models with OEM Tombstone Taillight


Including 1997-2003 Softail Heritage Springer/Classic, 2005-2014 Softail Deluxe and Softail Deluxe CVO™



Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

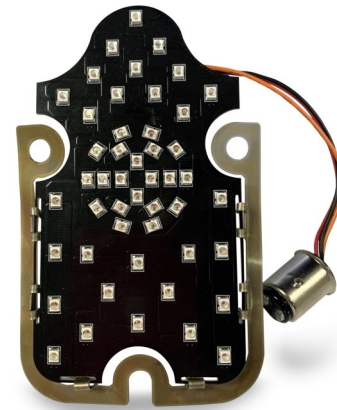

Installation:

1. Remove the 3 screws from stock lens and remove lens and housing. On some models the license plate mount will also need to be removed.
2. Remove OEM bulb from socket.
3. Be sure socket is clean.
4. Insert 1157 base into OEM socket and twist so that base is fully seated.
5. Reinstall lens and housing assembly. Reinstall license plate mount if removed.
6. Tighten all three screws.
7. Test operation of running light and brake light modes before riding.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST