



Custom Dynamics® Mirror Adapter Installation Instructions

We thank you for purchasing the Custom Dynamics® Mirror Adapter. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-MIRADPT-02

Package Contents:

- Mirror Adapter (Pair)
- M8 Lock Washer (2)
- M8 x 1.25 Nut (2)
- Thread Locker (1)



Fits: Harley-Davidson Street 500 & 750 (Does not fit Street Rod)

(M8 x 1.25 to 5/16-24 Right Hand Thread)

Installation:

2. Thread the Mirror Adapter into the mirror.
3. Thread the provided M8 x 1.25 nut by hand onto the Mirror Adapter until seated against the stop.
4. Install the provided M8 lock washer onto the Mirror Adapter.
5. Thread the mirror with the Mirror Adapter, Nut, and Lock Washer into the OEM mirror adapter until seated.

NOTE: The OEM mirror adapter must remain in place after removing the stock mirrors. See Photo 2.



ATTENTION



Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Installation:

1. Remove the existing stem from the mirror. See Photo 1.

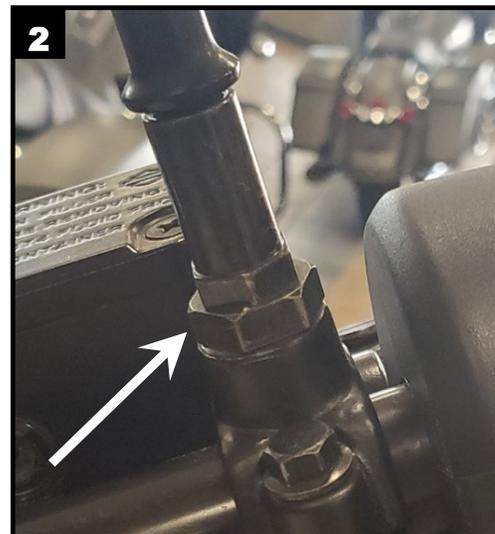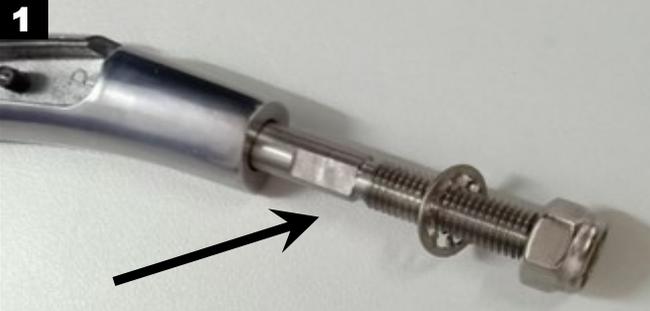

6. Unthread the mirror until you obtain the desired viewing angle.
7. Hold the mirror and tighten the Mirror Adapter Nut down against the stock mirror mount. When tighten, you should not be able to move the mirror.
8. Repeat Steps 1-7 for the other side.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST