

RICKKRAK - FILLER LIGHT BRACKET

Installation Instructions


Engineered by RICKKRAK TO ADAPT

Custom Dynamics part #s PB-FILL-SB, PB-FILL-RB, PB-FILL-RC, & PB-FILL-SC to fit '09 to '13 Touring Models
Drag Part #s 2040-2158, 2040-2156, 2040-2157, & 2040-2159 also to fit '09 to '13 Touring Models

The best way to fill the void between the saddlebags and fenders



Available in Gloss Black or Aluminum Finish to match the color of light ordered

- 1 You will need to remove any saddlebag bars which wrap around the rear of the saddlebag

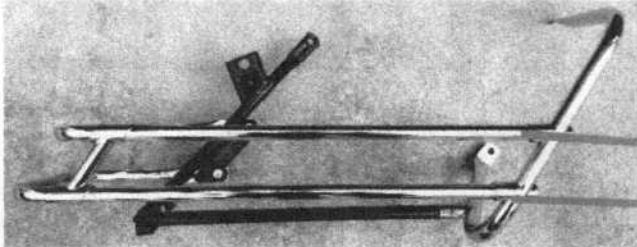


If you have these bars on your Bike, they will need to be removed

- 2 If you had bars as shown above and removed them, it should now look like below
Next drill out the small hole (Circled Below) to 1/4 "

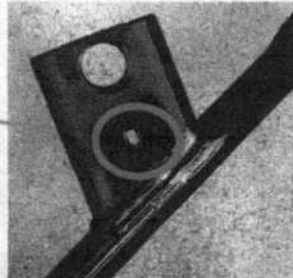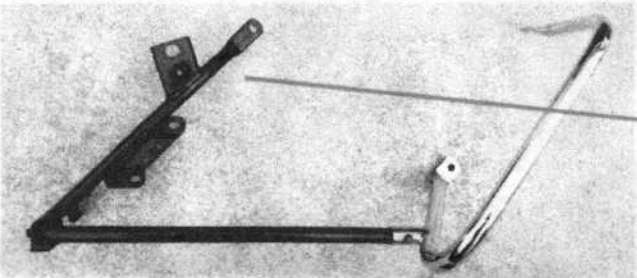


With Bars removed filler light bracket can now be installed

- 3 Adhere The Custom Dynamics Filler Light onto the Rickrak Bracket per CD instructions
Using 1/4" bolt, nut, & Anti-Sieze supplied. Attach top of Filler Bracket to Bag mount.
Bottom of Filler Bracket attaches to bottom of Fender bracket using Factory Hardware
Filler Bracket is slotted to allow centering of light between Fender and Saddlebag

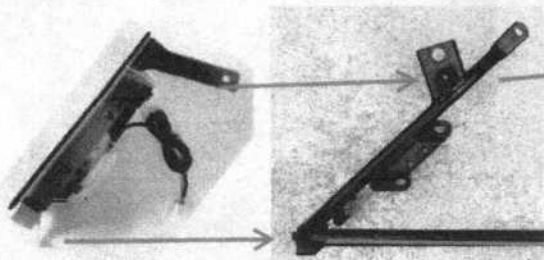

- 4 Here is a completed Filler Bracket installed with the Custom Dynamics Filler Light

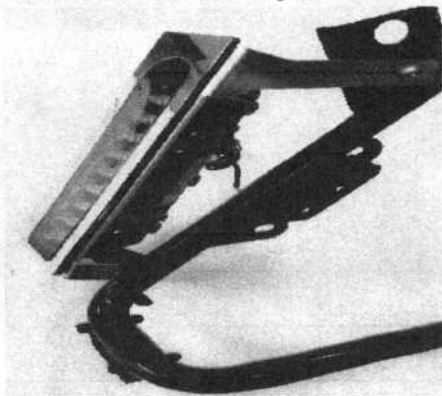

- 5 See Custom Dynamics Filler Light Instructions for wiring

If your bike is equipped with a front guard bar, you may remove it using the guard eliminator bracket available in Black or Chrome from Rickrak.com



Questions ?? Give Rickrak a call at 716-969-1694