



Custom Dynamics® Magic Strobes™ Brake Flasher Installation Instructions

We thank you for purchasing the Custom Dynamics® Magic Strobes™ Brake Light Flasher! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: MAGIC-STROBES-BCM

Package Contents:


- Magic Strobes™ Brake Flasher (1)
- Tie Wraps (5)

Fits: 2014-2023 Harley-Davidson® Ultra Limited (FLHTK), 2014-2022 Road King (FLHR), 2022-2023 Street Glide ST (FLHXST), Road Glide ST (FLTRXST) & CVO™ Road Glide Limited (FLTRKSE), 2020-2023 Road Glide Limited (FLTRK), 2019-2022 Electra Glide Standard (FLHT), 2014-2019 Electra Glide Ultra Classic (FLHTCU), 2015-2016 Ultra Classic Lo (FLHTCUL) & CVO™ Road Glide Ultra (FLTRUSE), 2016-2019 Road Glide Ultra (FLTRU), 2015-2018 Ultra Limited Lo (FLHTKL) and 2014-2021 CVO™ Limited (FLHTKSE).

(This unit will strobe the lower center taillight only, can be used with our without MAGIC-STROBES-LTP2 to apply brake flash/strobe pattern to Tour-Pak, sold separately)

Installation

1. Secure motorcycle on level surface.
2. Remove seat to gain access to wire harness.
3. Disconnect negative battery cable from the battery.
4. Locate and unplug the lighting connector to the rear fender. (See photos page 2)
5. Plug the Magic Strobes™ module, in-line, into the rear lighting harness and into the bike's wiring harness.
6. Re-connect the battery's negative battery cable to the negative of the battery.
7. Select Desired Pattern on the dial with power Off. (See page 2 for Pattern Information)
8. Check Operation.
9. To change pattern, turn bike off and change dial to desired pattern.
10. Locate a secure place for the Magic Strobes™ unit that will not interfere with the secure placement of the seat. Secure with the enclosed tie-wraps so that unit will not move.

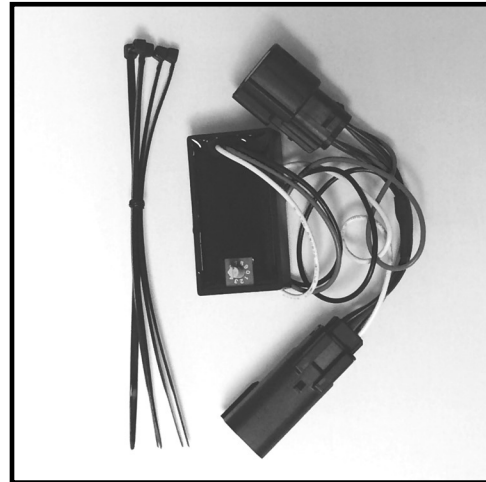

Please read all Information below before Installation

Important: Module must be secured after installation. Find safe area away from any moving parts and out of the way of normal operation of the bike. Use the enclosed tie-wraps to secure. Custom Dynamics® is not liable for damage as a result of improperly securing or failing to secure the module.

Important: Dial and switches should be maneuvered by hand only. Do not use any tool such as a screwdriver that could damage waterproof covers.

Important: When Changing settings on Magic Strobes™ module, bike power must be OFF.

Important: Customers using this module with standard incandescent bulbs should use patterns 0-3 only. Any other settings selected will result in diminished performance. All strobe patterns are compatible with the use of LED's.


Caution: A stuck brake switch may cause this unit to over-heat and fail. Unplug module immediately if this condition occurs.

Note: Although this device has been designed to significantly increase your braking visibility, flash/strobe patterns may not be street legal in your area. This Device is not DOT approved.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

Harness Connector Location—Top Rear Fender

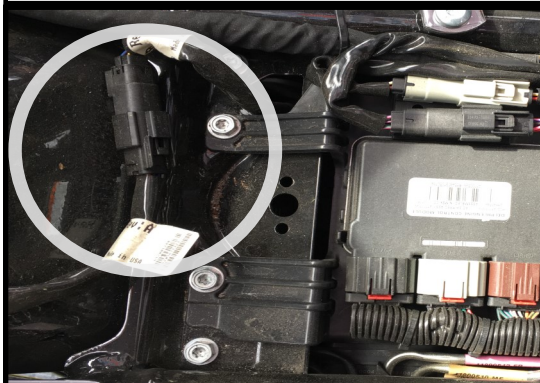


For: Road King, Electra Glide Ultra Classic, Electra Glide Ultra Classic Lo, Electra Glide Ultra Limited, Electra Glide Ultra Limited Lo, Road Glide Ultra CVO

Harness Connector Location—on top of ECM



For: Road King CVO, Street Glide CVO

Flash Pattern Information:

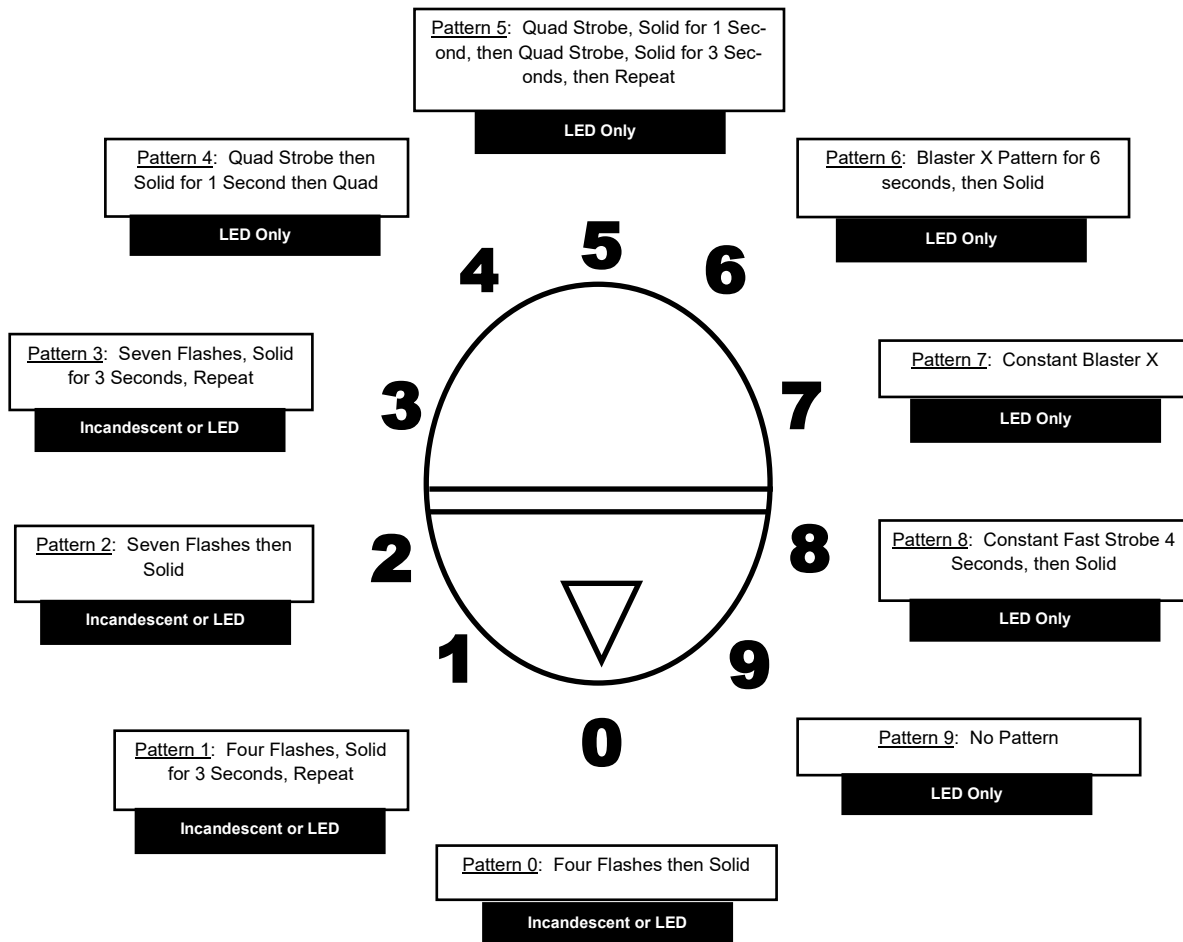

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST