



Custom Dynamics® Bullet Lens Installation Instructions

We thank you for purchasing the Custom Dynamics® Bullet Lens. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support. If you have questions before or during installation of this product, please call Custom Dynamics® at 1(800) 382-1388.


Part Number: HDBULLETC HDBULLETS
HDBULLETR HDBULLETA

Package Contents:

BULLET LENS (1)

Fitment: 2000-Current Harley-Davidson® motorcycles with OEM New Bullet Style H-D™ Turn Signal Housings. Can only replace the front lenses on V-Rod® models and 2008-2012 XR1200.

Chopper: Thunder Mountain, Big Bear Chopper, Big Dog, Boss Hoss, & American Ironhorse.

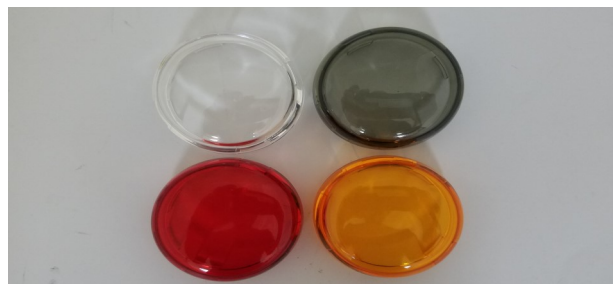

Please read all Information below before Installation




ATTENTION



Safety First: Make sure the bike is parked on a level surface and bike 's mechanical components are cool to the touch.

Installation:

1. Remove old lens using a flathead screwdriver.
2. Find notch on lens cover. Insert flathead screwdriver twist to release tab (See photo below).
3. Remove any dirt or debris from housing.
4. Install new lens by pressing into housing.

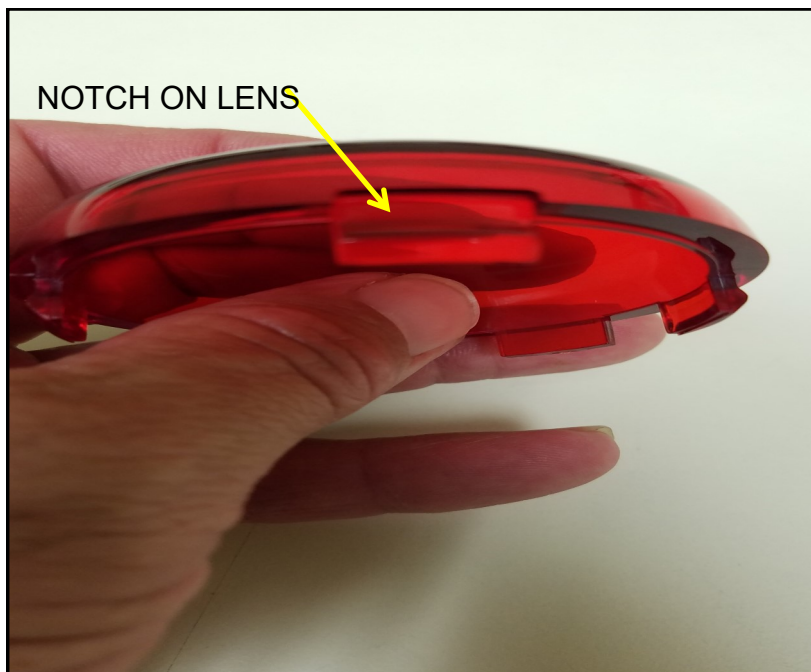

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST