

PROBEAM®

BY CUSTOM DYNAMICS®

Custom Dynamics®

ProBEAM® Flat Bezel Lenses

Installation Instructions

We thank you for purchasing the Custom Dynamics® ProBEAM® Flat Bezel Lenses! Our LEDs offer maintenance free service and higher visibility. Our ProBEAM® product line utilizes the latest technology and automotive grade components to ensure the highest level of reliable service. Custom Dynamics® offers one of the best warranty programs and customer support in the industry. If you have any questions during the installation of this product please call us at 1(800) 382-1388.

Part Number:

PB-FLAT-BEZ-BR PB-FLAT-BEZ-BS
PB-FLAT-BEZ-CR PB-FLAT-BEZ-CS

Package Contents:

- ProBEAM® Flat Bezel Lenses (1 pair)
- Mounting Screws (4)
- Instructions



Fitment: For use with ProBEAM® Bullet LED Turn Signal Inserts (sold separately)

1986-2013 Harley-Davidson® Electra Glide Classic (FLHTC), Electra Glide Standard (FLHT), Ultra Classic (FLHTCU), Ultra Limited (FLHTK), 1986-2022 Road King (FLHR), Road King Classic (FLHRC), 1986-2017 Heritage Classic (FLSTC) and 1999-2003 Road Glide (FLTR).

Installation:

1. Remove the existing lens and turn signal bulb from turn signal housing.
2. Remove any corrosion or dielectric grease from the socket to insure the socket contacts are clean.
3. Lay the ProBEAM® Flat Bezel Lens face down on a flat scratch free surface and insert the ProBEAM® LED turn signal into the Flat Bezel Lens as shown in Picture 1.
4. Gently bend the 2 Flat Bezel Lens turn signal holding tabs down to secure the ProBEAM® LED turn signal in the Flat Bezel Lens as shown in Picture 2.
5. Confirm the proper orientation of the socket base and insert the ProBEAM® LED turn signal base into the socket. If it seems hard to twist the base into the socket or hard to remove, it is orientated the wrong way.
6. Twist the Flat Bezel Lens a few rotations to coil wire from the ProBEAM® LED turn signal to the socket base.
7. Install Flat Bezel Lens onto the turn signal housing and secure with the provided screws.
8. Check operation of turn signals in all modes




Please read all Information below before Installation

Note:

- Use care in removing the OEM lens and bulbs from the housing, so as not to scratch or mar the chrome housing. Custom Dynamics® is not liable for damage to chrome housing during installation.
- ProBEAM® Amber/White Front Turn Signals are DOT and SAE compliant when used with ProBEAM® Smoke Lenses.
ProBEAM® Red Rear Turn Signals are DOT and SAE compliant when used with ProBEAM® Smoke or Red Lenses.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

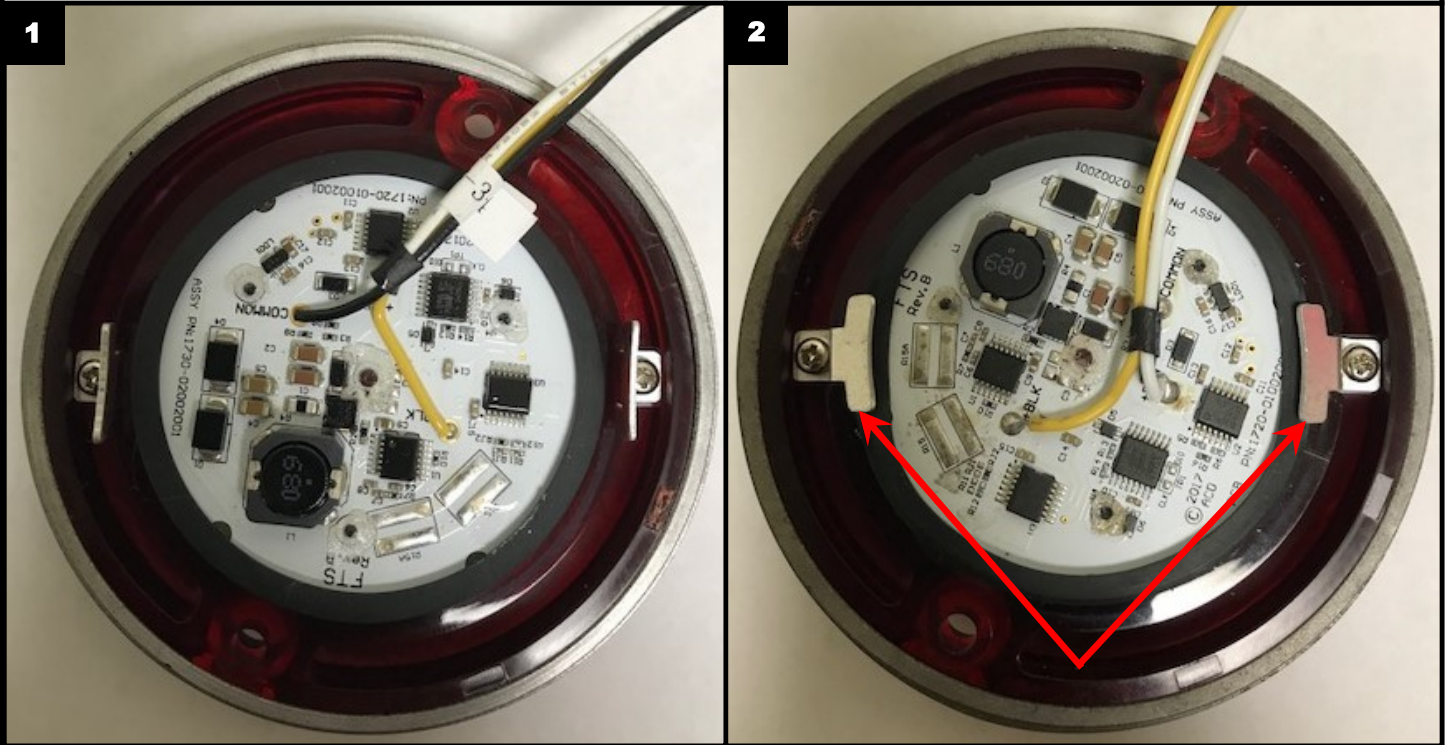

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST