



Custom Dynamics® Bullet Lens Installation Instructions

We thank you for purchasing the Custom Dynamics® Bullet Lens. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support. If you have questions before or during installation of this product, please call Custom Dynamics® at 1(800) 382-1388.

Part Number: HDBULLETC HDBULLETS
 HDBULLETR HDBULLETA

Package Contents:


BULLET LENS (1)

Fitment: Harley-Davidson® Models, 2000-2018, 2002-2017 V-Rod Models can only replace OEM front New Bullet Style Turn Signal Lenses, and 2016-2017 CVO™ Models can only use New Bullet Style Lenses if using in conjunction with Custom Dynamics® LED Turn Signal Inserts.

Chopper: Thunder Mountain, Big Bear Chopper, Big Dog, Boss Hoss, & American Ironhorse.

Installation:

1. Remove old lens using a flathead screwdriver.
2. Find notch on lens cover. Insert flathead screwdriver twist to release tab (See photo below).
3. Remove any dirt or debris from housing.
4. Install new lens by pressing into housing.

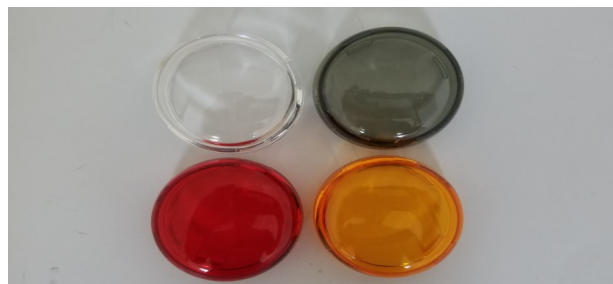


Please read all Information below before Installation



ATTENTION



Safety First: Make sure the bike is parked on a level surface and bike 's mechanical components are cool to the touch. To prevent electrical shock, disconnect the negative battery terminal from the battery before beginning installation.

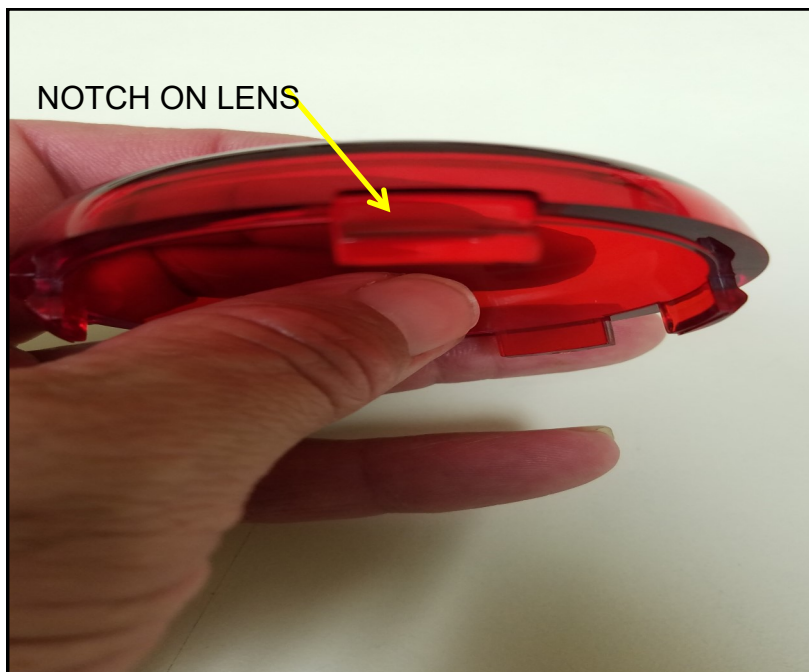

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST