



## Custom Dynamics® Universal Relay Harness Installation Instructions

We thank you for purchasing the Custom Dynamics® Universal Horn relay Harness! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

### Package Contents- UNV-HARNESS:

- Horn relay with Wiring Harness
- Posi-Lock Connectors (2)

Fits: Universal

1. Connect the long wire female spade terminals to the positive [+] and negative [-] Male spade terminals on the horn. The positive wire on the relay is Red. (see picture for locations)
2. Using the included Posi-lock™ connectors, attach the short wires to the bike's horn wiring, Red wire is Positive [+], Black Wire is negative [-].
3. Connect the wire with the fuse attached to the Positive [+] post of the battery.
4. Test Function of horn.

### Posi-Lock™ Connector

**EASY AS ①②③**



① Strip wire 1/2"




② Insert



③ Hand tighten

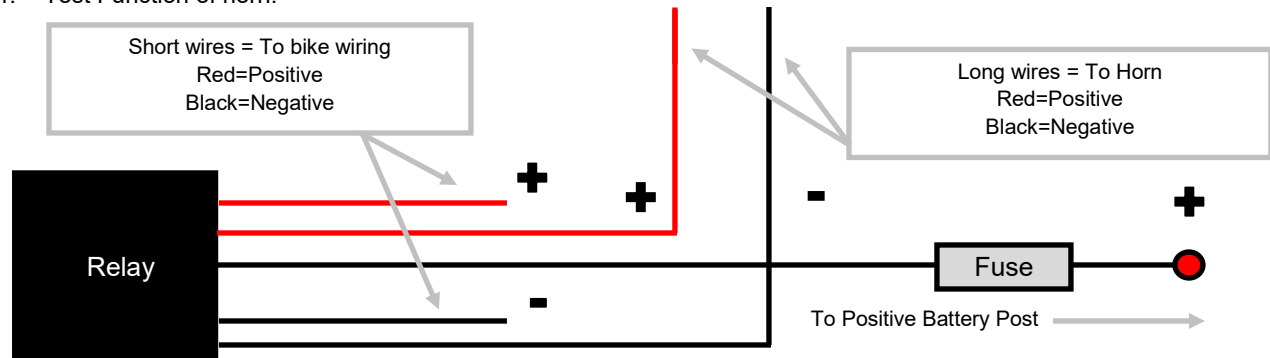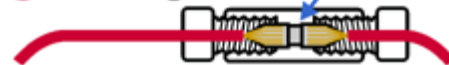

**Wiring the horn relay:** Should the wiring separate from the relay, use the pictures below to ensure the wires are connected to the correct terminal of the relay.

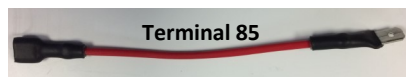

Terminal 85




Terminal 87



Terminal 86



Terminal 87A

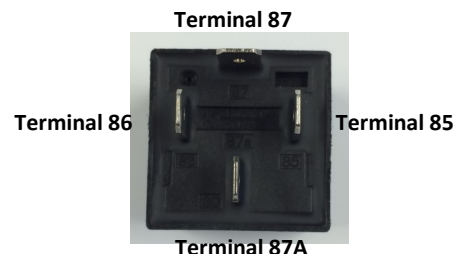

Terminal 87

Terminal 86

Terminal 85

Terminal 87A

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST