



Custom Dynamics® Universal Steering Column Switch Installation Instructions


We thank you for purchasing the Custom Dynamics® Universal Steering Column. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-UTV-SWITCH

Package Contents:

- Universal Steering Column Switch (1)
- Mounting Clamp (1)

Fits: Universal fitment for UTV's with exposed steering columns requiring turn signals and 4-way hazards for on-road use.

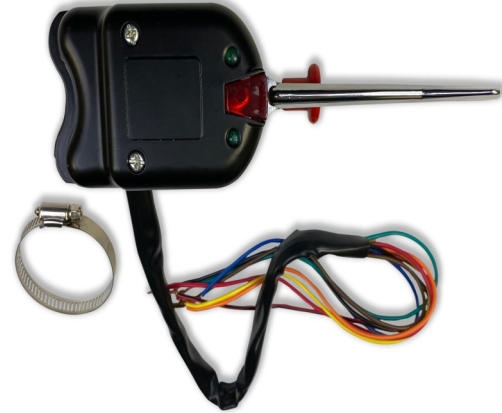

Installation:

1. Disconnect the negative battery cable from the battery.
2. Using the provided mounting clamp, mount the Steering Column Switch to the steering column. Allow clearance to fully operate the turn signal lever and hazard button on the Steering Column Switch.
3. Connect the vehicle lighting to the Steering Column Switch. Refer to the wiring diagram on Page 2 for wiring connections.
4. Test operation of all lighting before operating vehicle.



ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Wiring Diagram

